



Trimline 83 Room Divider DB 1184  
Trimline 83 Tunnel DB 1185

## INSTALLATION INSTRUCTIONS

# CONTENTS

|            |  |    |
|------------|--|----|
| 1          | INSTALLATION INSTRUCTIONS .....  | 3  |
| 2          | PLACING THE APPLIANCE.....   | 3  |
| 2.1        | Preparation and installation .....   | 3  |
| 2.2        | Connection to the gas supply pipes .....   | 4  |
| 2.3        | Installation methods.....  | 4  |
| 3          | INSTALLATION OF THE CERAMIC WOOD SET AND DISPERSION MEDIUM.....  | 6  |
| 4          | REMOVING AND INSTALLING THE GLASS PANELS.....  | 8  |
| 4.1        | Room Divider.....  | 8  |
| 4.2        | Tunnel.....  | 10 |
| 4.3        | AR glass (Optional) .....  | 11 |
| 5          | FITTING THE LED GLOW BED MODULE (OPTIONAL).....  | 12 |
| 6          | INSTALLING REAR WALLS (OPTIONAL).....  | 15 |
| 6.1        | Installation for optional black glass.....   | 15 |
| 6.2        | Installation instructions for the grooved wall set.....  | 15 |
| 7          | TECHNICAL DETAILS MAXITROL GV60 .....  | 16 |
| 8          | INSTRUCTIONS FOR MAXITROL GV60 .....   | 18 |
| 9          | GAS-TECHNICAL SPECIFICATIONS.....  | 19 |
| 10         | CONCENTRIC PATHWAYS .....  | 21 |
| 11         | CONCENTRIC FLUE SYSTEM .....   | 22 |
| 11.1       | Components of the concentric flue system .....   | 22 |
| 11.2       | Construction of concentric flue system .....   | 22 |
| 11.3       | Installation instructions regarding existing flues.....  | 22 |
| 11.4       | Parts .....  | 23 |
| 11.5       | Installation.....  | 23 |
| 12         | PASS-THROUGH POSITIONS AND FUNCTION CORRECTLY .....  | 24 |
| 13         | CLEANING AND MAINTENANCE .....   | 25 |
| 14         | QUICK REFERENCE GUIDE FOR FAULTSSEARCH FOR ENCLOSED APPLIANCES<br>USING MAXITROL GV60 GASCONTROL ..... | 26 |
| Appendix 1 | DIMENSIONAL DRAWINGS .....   | 28 |
| Appendix 2 | BUILT-IN EXAMPLES.....   | 30 |
| Appendix 3 | CONSTRUCTION DIAGRAM DOUBLE-WALL CONCENTRIC .....  | 32 |
| Appendix 4 | PREPARATION AND INSTALLATION .....   | 33 |
| Appendix 5 | PREPARING GAS CASSETTE GV60 FOR INSTALLATION .....   | 34 |
| Appendix 6 | EXPLODED VIEW AND SPARE PARTS .....  | 36 |

thermoCet International B.V.  
Laagerfseweg 27  
3931 PC Woudenberg  
The Netherlands  
www.trimlinefires.com.



Modifications and printing errors are reserved.

thermoCet International BV is not responsible for any  
(consequential) damage due to incorrect installation.

V111021



# 1 INSTALLATION INSTRUCTIONS

## NOTE

The installation should be performed only by an authorized gasfitter.

- The appliance must be installed, connected, inspected and serviced as a closed appliance by a qualified fitter, according to local standards and regulations.
- The flue tube system and the outlets in the outer wall or roof face must also meet the requirements outlined in the applicable local standards and regulations.
- The appliance has been approved in combination with the concentric flue system THC/Holetherm in accordance with European CE standards for gas appliances, and may therefore only be applied with this system.
- The appliance needs to be inspected by the fitter for local gas distribution (gas type and gas pressure) as indicated on the identification plate.
- The instructions are only applicable if the relevant country code is stated on the appliance.
- There will be air in the gas pipes when the appliance is first used. The gas supply pipes therefore need to be vented first.

- Ignite the appliance according to the user manual and check the flame is burning evenly. After the appliance has been used for the first time, any deposits resulting from curing must be removed from the glass panel using a glass cleaner made specifically for fireplaces.

## Distance from flammable materials in the vicinity of the appliance

Do not place flammable materials within 500mm of the part of the appliance that radiates heat.

## Distance to non-flammable materials

The appliance needs to be placed a minimum distance of 25mm from the wall unless stated otherwise in these instructions.

## WARNING

- Gas fires become hot when in use. After installation of the appliance, the glass panel surface is considered to be an active zone. The glass panel surface can become very hot.
- Therefore, you should take care by, for example, keeping children and those requiring help away from the immediate vicinity of burning fires. Gas fires must not be placed on or against flammable materials.

# 2 PLACING THE APPLIANCE

## NOTE

Before installing the appliance, please read Chapter 4 *Removing and installing the glass panel*, 10 *Concentric pathways*, 11 *Concentric flue system* and APPENDIX 2.

## 2.1 Preparation and installation

- Check the packaging for damage. Remove the packaging and check the contents are intact and complete. Report damage and defects to the supplier immediately.
- The packaging contains the following components:
  - Unit
  - Remote control
  - Ceramic wood set
  - Restrictor(s)
  - 4 x AA battery
  - 2 x AAA battery
  - Suction cup(s)
  - Adjustable feet
  - Decorative strips packed separately
  - Built-in cassette
  - 2 Convection grilles
  - Installation instruction
  - User manual

## NOTE

Do not start the installation until you have read and understood the installation instructions.

- Place the appliance on a stable surface. Remove the glass panel (see Chapter 4 *Removing and installing the glass panel*) so you can take out the packaged parts. Check it for damage and defects.
- Put the appliance in place using the adjustable feet (supplied) and the wall mounting. The adjustable feet can be used for fine adjustment of the appliance; an optional leg extension set is also available. APPENDIX 4 Image 5
- The gas valve must be installed in the gas control box (see Paragraph 2.2 *Connection to the gas supply pipes*).

### Optional

The gas valve can be mounted under the appliance using a wall bracket (floating platform). This must be accessible.

- The distance between the gas valve and the appliance is determined by the cable length (maximum 1200mm, in combination with the LED module 1000mm).
- The flue path determines whether a restrictor and/or baffle plate must be fitted (refer to Chapter 10 *Concentric pathways* and appendix 4 *Preparation and installation*).

- The baffle plate is fixed with a screw and can be removed with a tilting movement.  
The flue restrictor can be put in place by sliding the baffle plate to the side. If applicable, the feed restrictor can be removed by unscrewing 2 screws. **APPENDIX 4** 1 2 3
- Connect the appliance to the concentric flue system.
- Position the supplied convection grilles at least 500 mm below the ceiling. If the space between the grille and the top of the ceiling in the chimney is very high, it is recommended that a false ceiling made of refractory material be installed in the chimney. **APPENDIX 2**

## 2.2 Connection to the gas supply pipes

### APPENDIX 5

- Remove the protective bracket under the appliance complete with gas valve (remove the tie straps) and secure it in the gas control box with the wing nut, which can be found inside.
- Take account of the power supply: batteries or 230V adapter.
- You can determine where the gas supply pipes will be placed, dependent on the layout. Ensure control equipment is not twisted during installation and there is no excessive tension. Accessibility of various connection points in relation to components needs to be maintained. After installation, check the connections are gas-tight. Use a 3/8" gas tap with a connector. Also ensure the gas supply pipe is free from dirt or sand. To prevent damage to the gas control equipment, the gas connection must be isolated from the electrical power.
- Ignite the appliance for the first time without a glass panel. Check all the gas connections for leaks again. You can then switch the appliance off and put the ceramic wood set in place (see Chapter 3 *Installation of the ceramic wood set and dispersion medium*).

#### NOTE

- If the appliance does not work properly and/or the flames do not look good, repeat the previous steps again while checking and correcting if necessary.
- The glass will now need to be cleaned again (see chapter 13 *Cleaning and maintenance*).

## 2.3 Installation methods

### APPENDIX 4

Depending on the desired set-up, you can decide to work with a wide decorative trims or just to connect the plateau almost directly to the glass panes of the appliance.

### Applying the wide decorative frame to the room divider and tunnel equipment 1


- The standing decorative strips have an adjustable magnet attachment at the bottom. Pull the decorative strip forward at the bottom and unhook it at the top.
- Push the lower decorative strip forward and then remove it.
- The unit can be built in, taking into account the correct built-in materials (fire-free/inflammable). Adjust the dimensions of the conversion in such a way that the wide decorative frames can be placed back on the fireplace without any problems.
- Keep in mind that the appliance gets hot and will expand. If the installation is too tight, less than 4 mm clearance, this can cause unwanted noise and damage the housing.
- After finishing (eg ornamental plaster or glass fiber wallpaper) of the surround, the trims can be put back again.

### Work with the Plateau directly on glass panes 2 3 4

- The plateau finish can be finished almost against the glass pane, see the orange dotted line. 1)
- Plateau materials must always be non-combustible. The glazing bars with leaf springs must remain removable at all times.
- Set profiles are provided on the underside of the device, which can serve as a boundary for the plateau material. These slidable profiles are adjustable in height 3 4). The sizes 20-30 mm are indicative of the platform thickness.

#### NOTE

- The platform material must not rest on the adjusting profiles. The appliance will get hot and expand, resulting in cracking of the platform material.
- The top of the platform must not extend above the insert strips, the glass panel must remain removable.

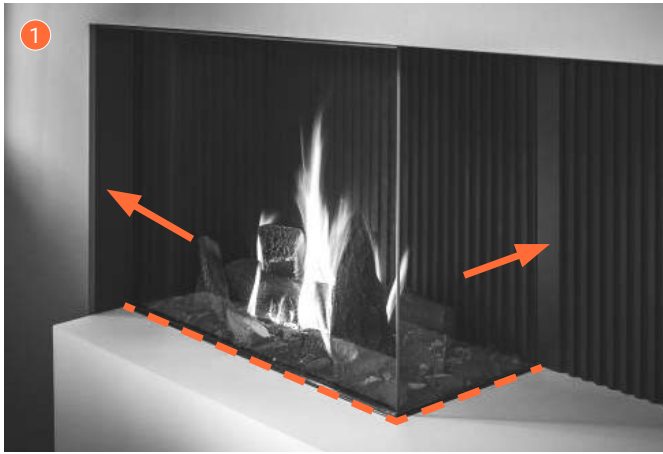

### 3 INSTALLATION OF THE CERAMIC WOOD SET AND DISPERSION MEDIUM

**NOTE**

- If a choice has been made to install the optional rear wall, this must be installed before positioning the logs (see Chapter 6 *Installing rear walls (optional)*).
- If a choice has been made to install the optional LED glow bed, this must be installed before positioning the logs (see Chapter 5 *Installing the LED glow bed module*).

When putting the ceramic wood set and dispersion medium **1** in place, the following must be taken into account:

- Do not place dispersion medium in or on the pilot flame.
- Prevent the ceramic materials coming into contact with the cord of the glass panel fixture.
- The fire outlet must remain free.
- The chips and coal embers must not touch the central log.
- Spread the glass granules evenly, especially over the central part of the perforated burner mesh, but keep the areas around the feet of the two standing burners clear. **2**
- After a standing burner has been removed from the appliance **3**, the central log **A** can be placed on the centre burner **4**. The burner ports must remain free and the log must rest on them without applying undue pressure. The standing burner can now be fitted.
- Put logs **B** in place with the burner recess on the burners. Pay attention to the correct position, left/right, and fit them without applying an undue load. **7**
- Fit the 4 charred logs **D** and **E** near the left and right burner foot. The charred parts should point upwards. **8**  
The flames must not touch the charred logs.


- Put the 2 curved logs in place **C**. **9**
- Spread the ash, chips and coal embers evenly on the sides and partly over the bed of glass granules.
- If desired, you can break the chips into smaller parts. If you want to use the LED glow bed module, you can use the chips to ensure the lights do not shine through.
- Dispersion medium can be set up along the outlet openings of the central log.

**WARNING**

Placing the logs in the wrong place can seriously affect the flames and/or cause the burning process to malfunction altogether.

- Ignite the appliance again without the glass panels fitted and check there is no dispersion medium against the burner ports and that the pilot light is not blocked.
- After checking and correcting if necessary, the glass can be fitted.
- Ignite the appliance again. Check the flames again after at least 15 minutes of heating time. Switch off the appliance and check the appliance ignites without any problems.




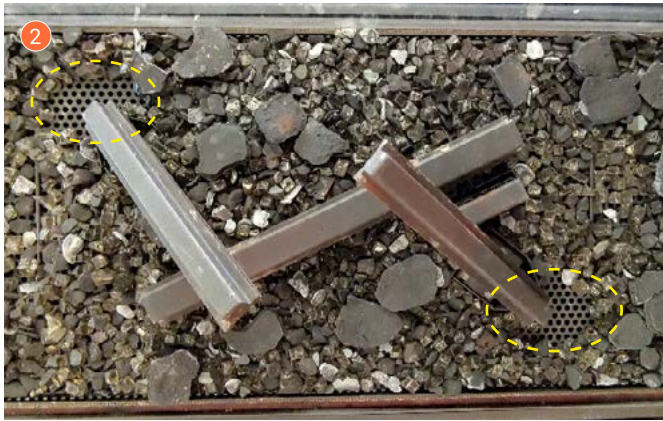

- 1 Put the dispersion medium in place.
- 2 The marked places must remain free of the dispersion medium.



- 3 Disassemble burner.

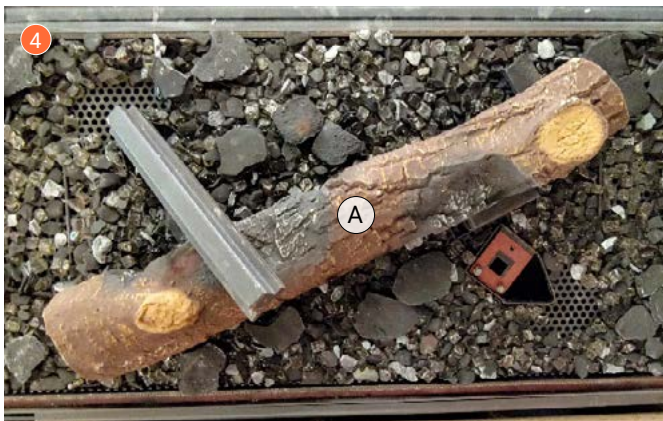


- 4 Put wooden block A in place.




- 5 Slide log A towards the pilot burner holder.




- 6 Install burner.

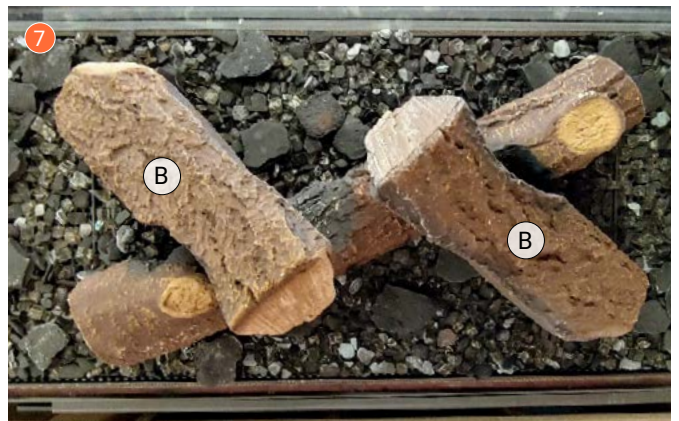

- 7 Put logs B in place.

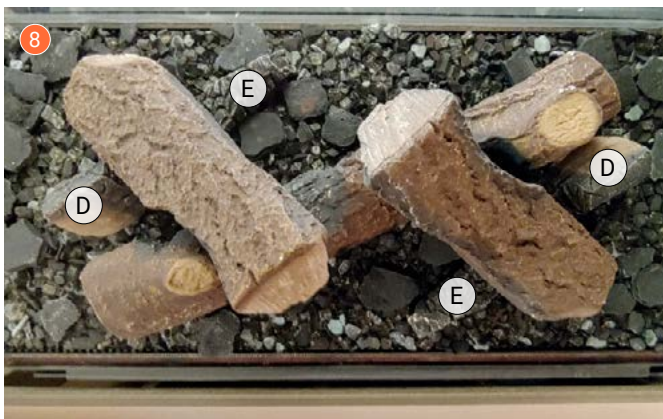

- 8 Put charred logs D and E in place.

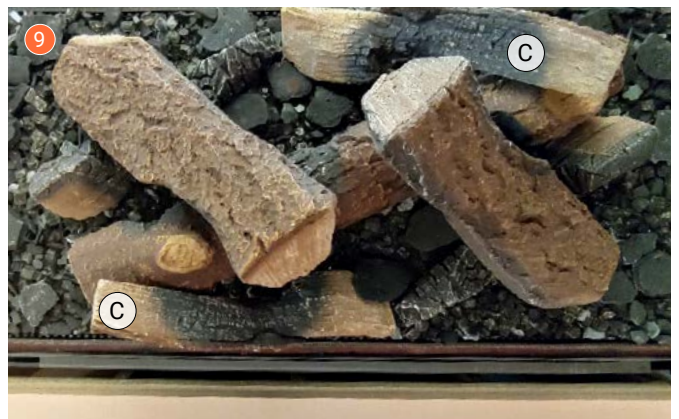

- 9 Put the curved logs C in place.

## 4 REMOVING AND INSTALLING THE GLASS PANELS

### NOTE

- The smallest glass pane does not have to be disassembled to remove the side glass pane.
- Check the seals are complete, intact and clean when fitting the glass panels. If not, the gasket will need to be replaced.

### 4.1 Room Divider

1 2 3 4 5 6

### NOTE

- First remove the transport protection during initial installation.

#### Smallest glass pane



- Remove the wide frames. 1
- Remove the glazing bar at the bottom upwards using the hole. 2
- Slide the glazing bar out to the left at the top of the lock. The glazing bar can now be removed. 4
- Slide the glass panel up using the supplied suction cup and pull the bottom towards you to slowly remove the glass panel. 6
- The glass pane can be replaced in reverse order.

#### Side glass pane

- Remove the wide frames.
- At the back of the appliance, there is a strip with springs that pushes the glass panel towards the gasket. 3
- Pull this strip forward and remove it.
- On the back is a strip with Allen screws. Loosen these Allen screws so the tension can be released from the springs. 5
- Remove the glazing bar at the bottom upwards using the hole. 2
- Slide the glazing bar out to the left at the top of the lock. The glazing bar can now be removed. 4
- Slide the glass panel up using the supplied suction cup and pull the bottom towards you to slowly remove the glass panel. 6
- The glass pane can be replaced in reverse order.


### NOTE

Do not forget to re-tension the springs that push the glass panel forwards so there is less chance of the window creeping.

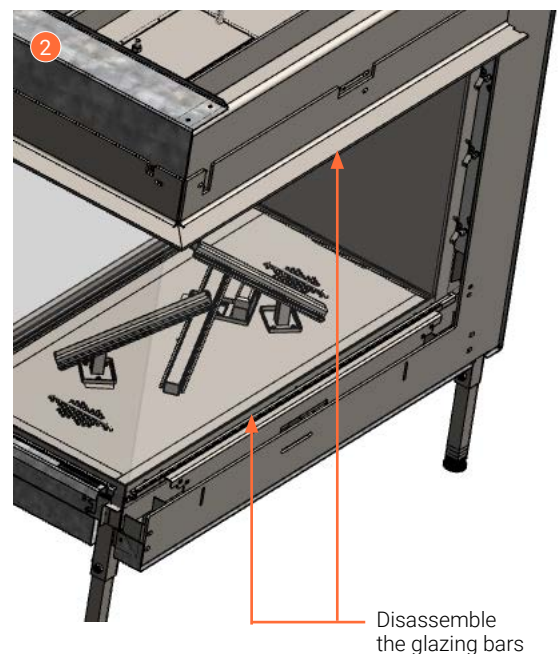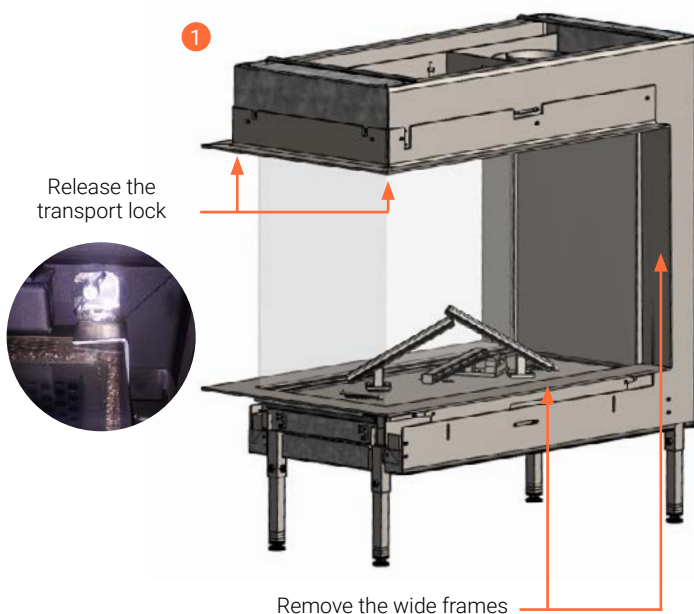





STRIP

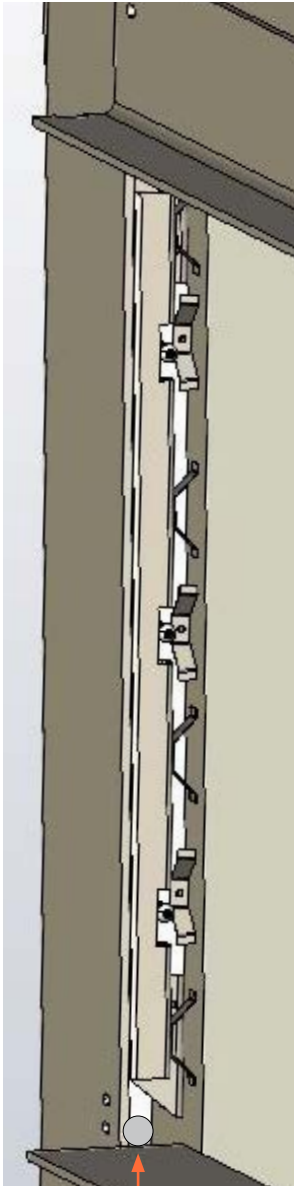

Magnet

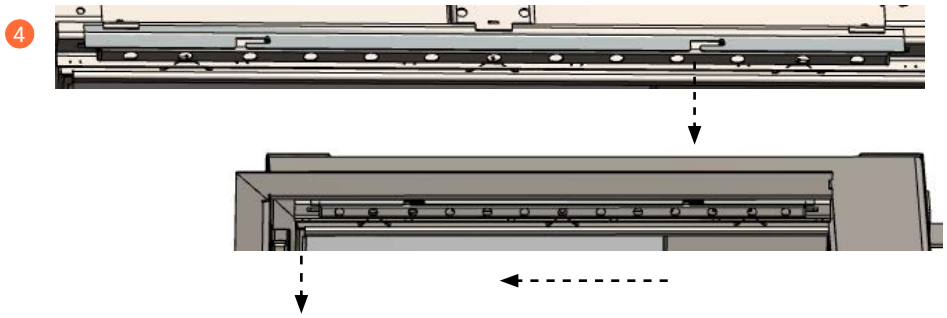

Slide the top glazing bar to the left out of the lock and then slide it down.

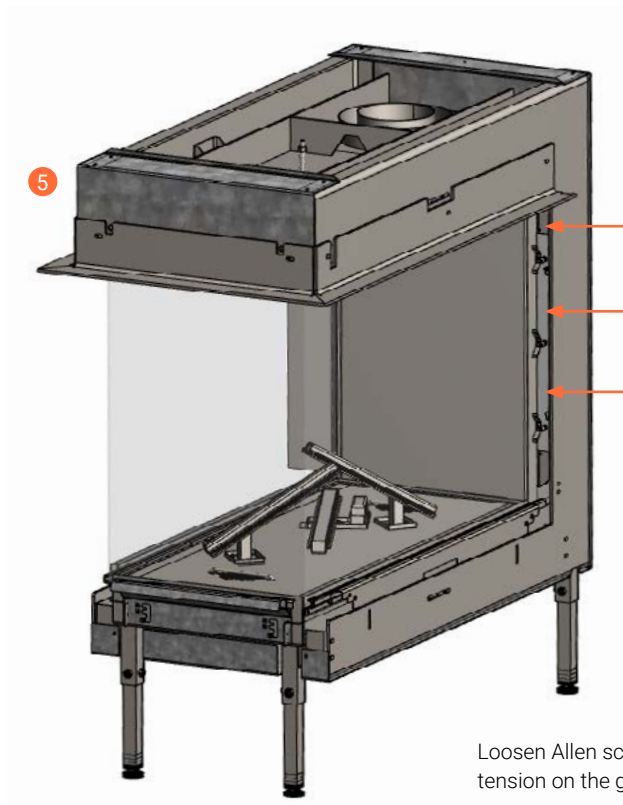

Loosen Allen screws to remove tension on the glass pane.


Use the suction cup to take out the glass pane.

- 1 Move the glass pane towards you and hold it.
- 2 Then slide it to the left. The glass pane is now free.
- 3 Push the glass pane up slightly.

Pull the pane towards you from the bottom and carefully set it aside.

**NOTE**



When removing, make sure the corners of the glass panel are not damaged.

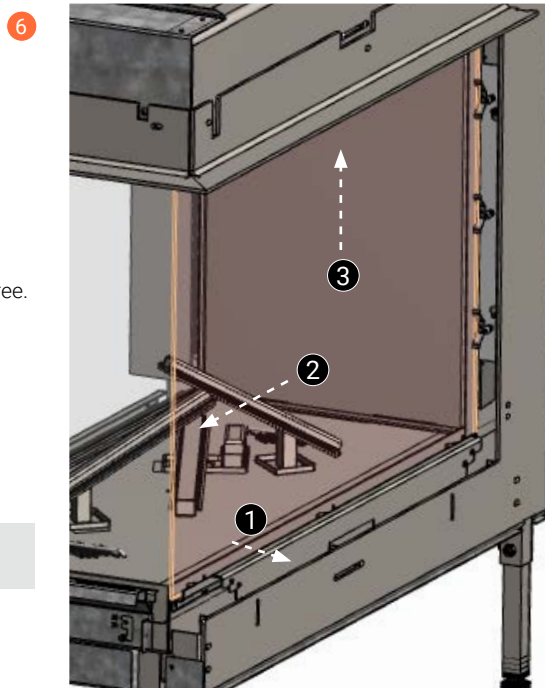

## 4.2 Tunnel

7 8 9 10 11

- Remove the wide frames. 7
- Remove the side locks by sliding the quick release upwards 8.  
The glazing bar can now be removed.
- The top and bottom glazing bars can be removed in the same way as the Room Divider. 9 10 11
- Slide the glass pane up using the supplied suction cup and pull the bottom towards you to slowly remove the glass pane.
- The glass pane can be replaced in reverse order.

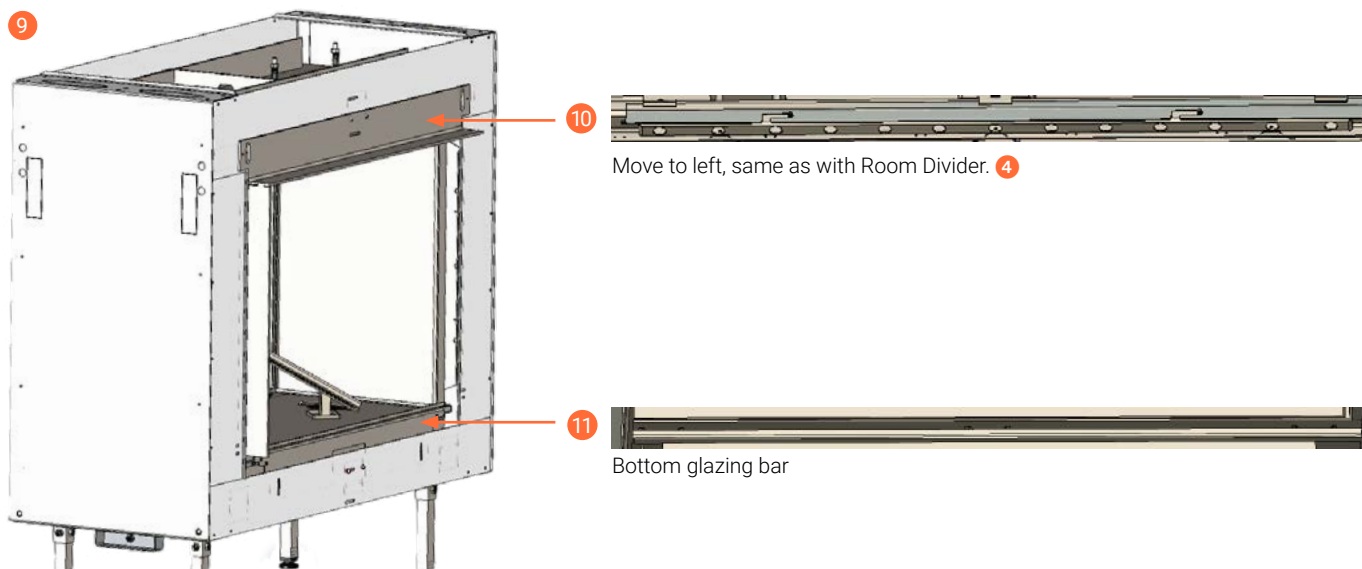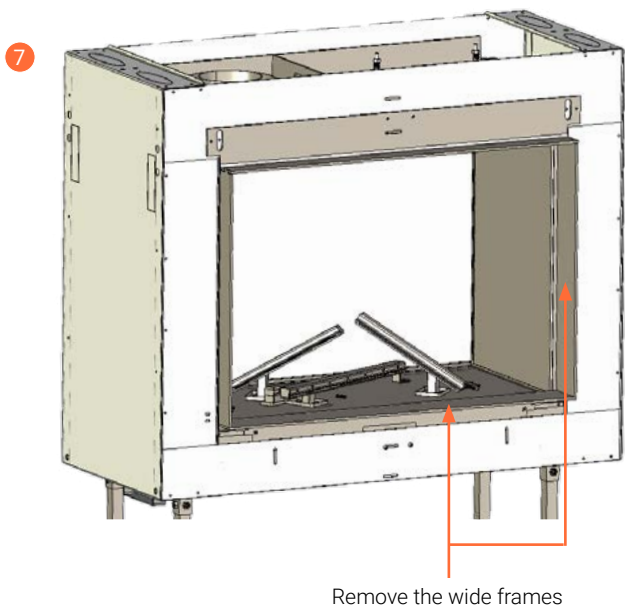

### 4.3 AR glass (Optional)

AR glass is a non-reflecting glass. This glass has an AR coating on both sides of the glass. The anti-reflection layer reduces the reflection to a minimal gloss.

#### NOTE

- The AR glass with coating is more sensitive to damage than normal glass.
- Always wear soft cotton gloves when removing and installing AR glass.
- The rubber suction cup(s) must be clean.
- If the dismantled glass panel is damaged (scratches and/or damaged edges) do not use the glass pane; notify the supplier.
- Use the thermoCet cleaner set to clean the AR glass. Other cleaning agents can damage the AR glass coating.
- Do not use hard (abrasive) sponges, steel wool, abrasives and/or cleaning agents containing ammonia, (citric) acid or ceramic hob cleaner.
- Do not leave any residue, such as fingerprints, behind. These will burn in and cannot be removed.

#### IMPORTANT

After lighting for the first time, a haze may form on the inside of the glass panel. When the appliance has cooled down after the first use, the glass must be cleaned immediately. The glass must be cleaned again after the appliance has been in use for a month. After this, the amount of cleaning can be determined depending on the frequency of use of the appliance. Bear in mind that the glass can become dull if it is not cleaned in good time. Cleaning then becomes more difficult.

## 5 FITTING THE LED GLOW BED MODULE (OPTIONAL)

The LED glow bed module **1** consists of:


- A** LED unit
- B** Mains adapter (not shown)
- C** Glass pane
- D** Glassholders

- Disassemble the burners and remove the burners and burner mesh from the appliance. The burner mesh is equipped with extendable lifting brackets **2**. Remove the plate between the burner feet. **3 4**
- Take the LED unit out of the packaging and guide the cable through the freed recess, and then put the LED unit in place in the recess. **5 6**

- Place the glass, smooth glossy side up, on top of the gasket and check the seal. **7 10 11 12**
- Fit the glazing bars on the LED unit and tighten the screws (not too tight to avoid glass breakage). **8**
- Connect the cable to the receiver and connect the receiver to the mains 230 V only using the adapter supplied. Check the LED unit is working (see user manual). **9**
- Place the burner mesh and burners in the correct position, check the gaskets are not damaged, ensure a 100% seal of the burners.

### **NOTE**

The Maxitrol adapter is not suitable for the LED unit.

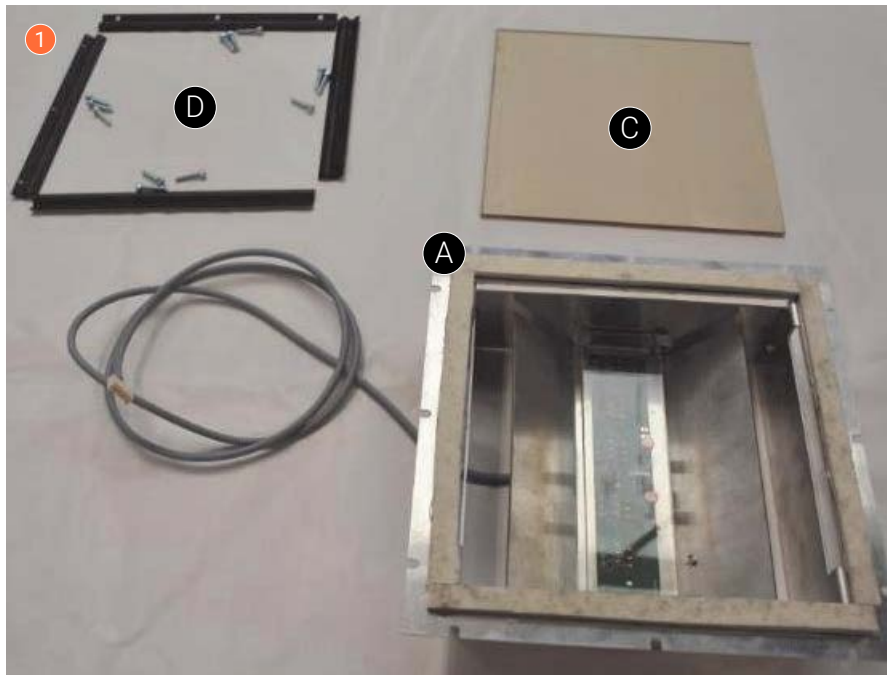


**⚠ WARNING**

The LED module cable must not touch the ignition cable. Beware of this during installation and after maintenance.




Ignition cable      LED module cable

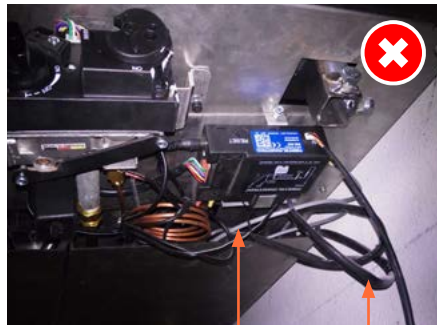


LED module cable      Ignition cable



LED module cable      Ignition cable

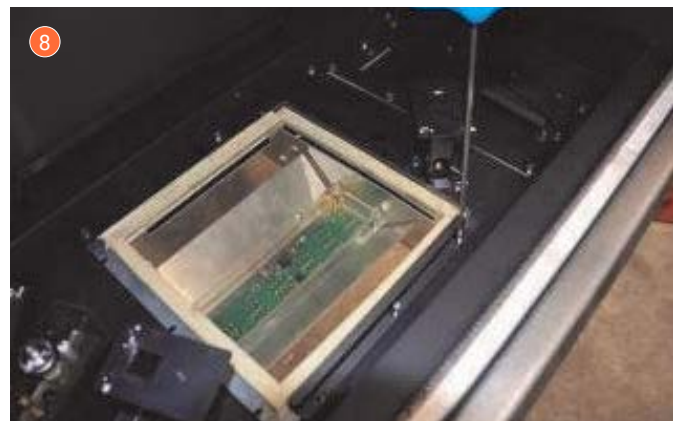

The implementation of the glass is matt.

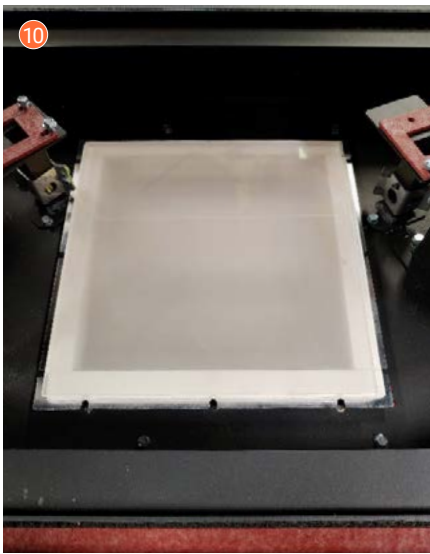

Gloss side must face up



Glossy side



Matte side

## 6 INSTALLING REAR WALLS (OPTIONAL)

### NOTE

If you have opted for a high-gloss black glass, grooved pattern, you must first assemble it before you put the wood set in place.

### 6.1 Installation for optional black glass


- Take out the baffle plate. ①
- Remove the support from the steel panel rear wall. ②
- Tilt the steel panel rear wall forward to take it out. ③
- Put the two supplied filler profiles in place. These fill the depth and support the black glass. ④
- Put the black glass in place against the metal profiles. ⑤
- Mount the bracket back in place. ②

### 6.2 Installation instructions for the grooved wall set


For a grooved panel, assembly is done the same way, without putting the filler profiles in place.




High-gloss black glass and 2 filler profiles.

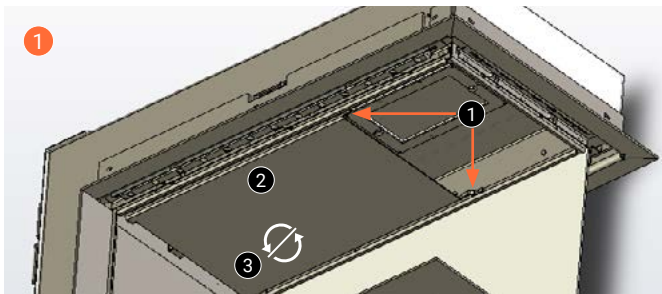

- ① Loosen two parkers
- ② Push the baffle plate from the rear wall towards the glass
- ③ Tilt to take out the baffle plate


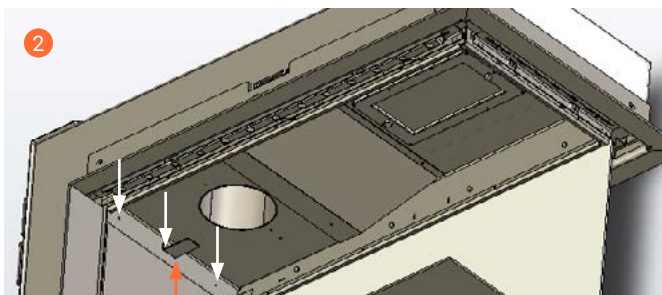


Disassemble the support by loosening 3 screws


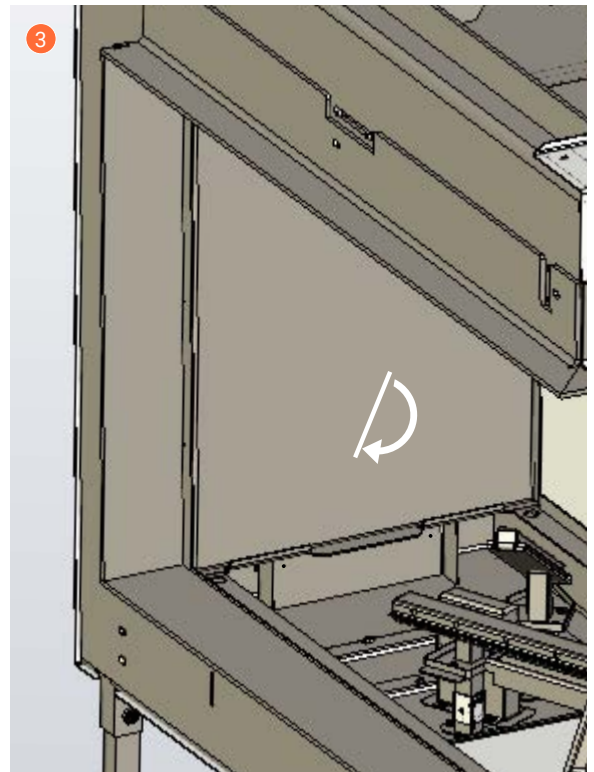


## 7 TECHNICAL DETAILS MAXITROL GV60

|                       |  |   |
|-----------------------|--|---|
| <b>Gas valve type</b> | Maxitrol GV60  |   |
| <b>Burner control</b> | B6R-R8P (WiFi-Ready)   |   |
| <b>Ignition</b>       | Remote control operation and piezo ignition  |   |
| <b>Gas connection</b> | <ul style="list-style-type: none"> <li>❶ Pilot burner connection</li> <li>❷ Thermocouple connection</li> <li>❸ Gas inlet 3/8" externally</li> <li>❹ Rear burner/outer burner gas outlet</li> <li>❺ Front/centre burner gas outlet</li> </ul> | <ul style="list-style-type: none"> <li>❻ Multi-cable</li> <li>❼ Ignition cable connection point</li> <li>❽ Double burner connector</li> <li>❾ Receiver</li> </ul> |
| <b>Unit category</b>  | C11-C31-C91  |   |
| <b>Pilot flame</b>    | SIT 3 flames   |   |
| <b>Security</b>       | Thermocouple principle   |   |

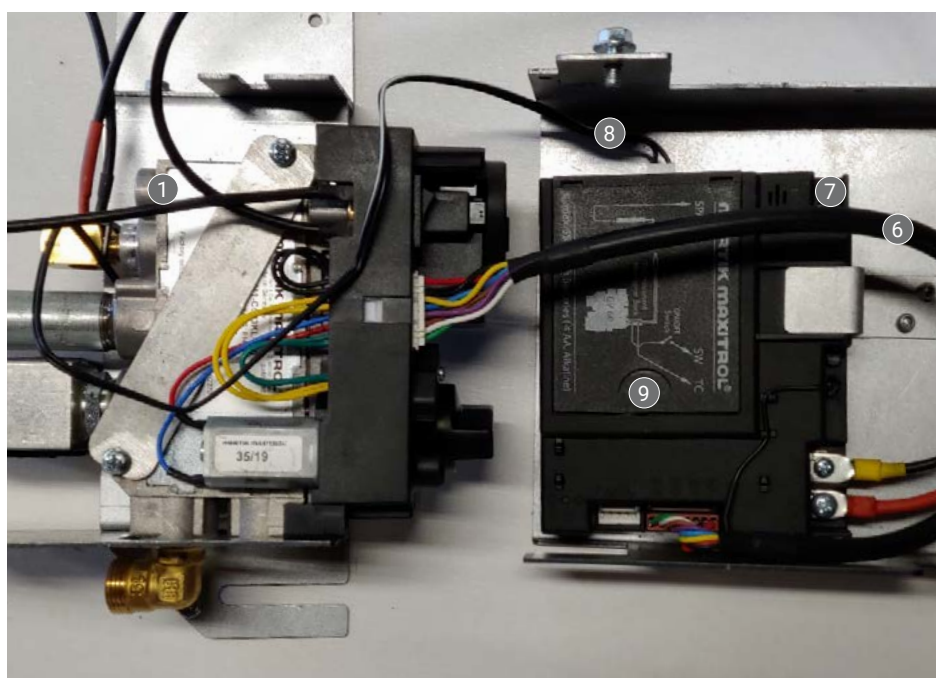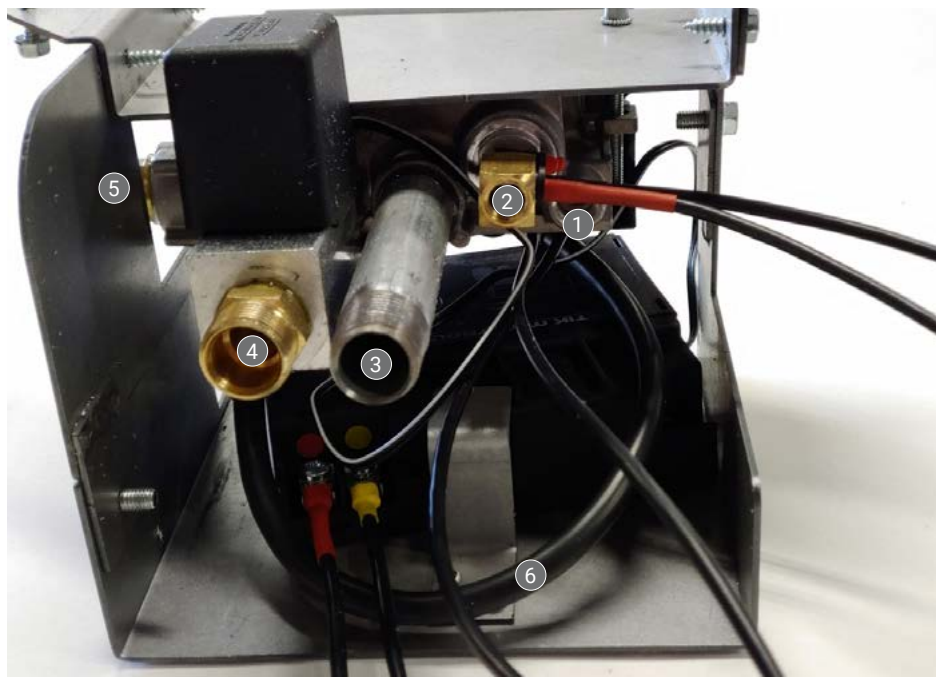



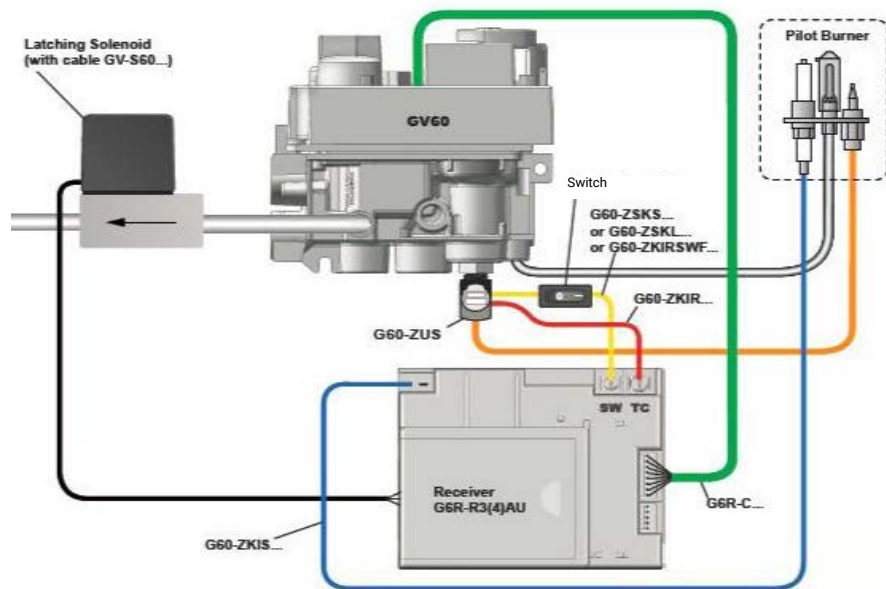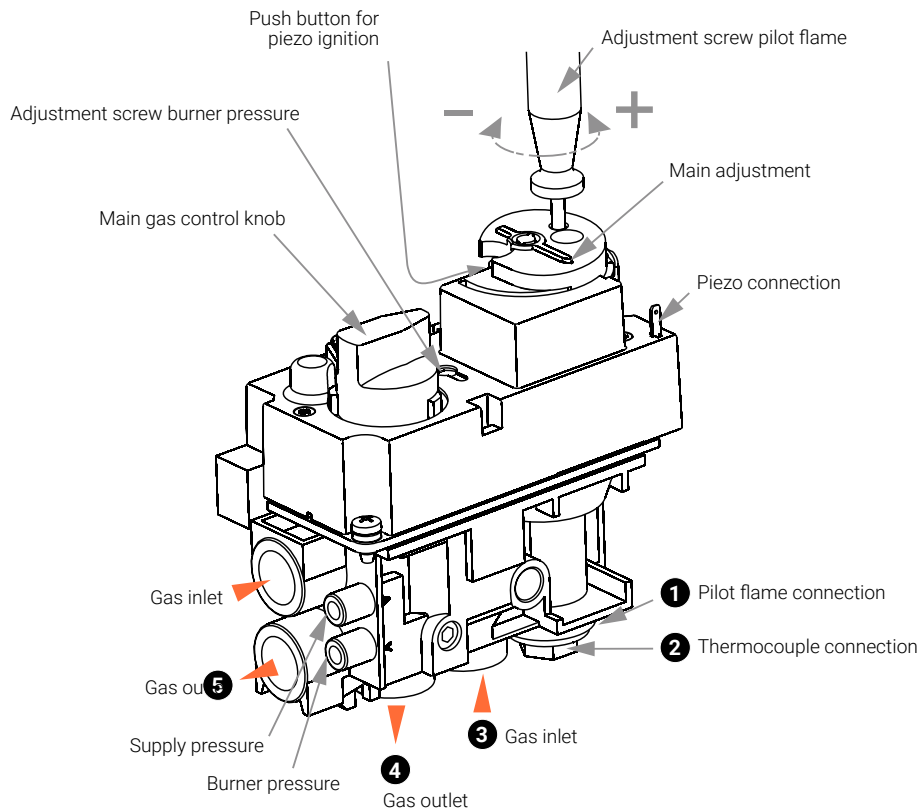

Schematic diagram.

**⚠ WARNING**

Sealed parts must not be adjusted.

## 8 INSTRUCTIONS FOR MAXITROL GV60

### ⚠ WARNING

- Ensure the fuel supplied to the appliance is clean and free from particles and moisture.
- The appliance must not be turned on if the glass pane(s) is not present and/or is broken.

Before a gas supply pipe (new or existing) is connected to the main gas pipe at the gas meter and to the gas valve of the appliance, clean and dry compressed air needs to have been blown through it. Copper and aluminium pilot flame pipes that have been cut must be deburred and blown clean before they are connected.

### Heat, moisture and dust are a threat to all electronic components

Protect the electronic gas control until all construction, plastering and paintwork has been completed. If you cannot avoid this work, then protect the control against dirt and moisture penetration by covering it with plastic film for instance.

### ⚠ WARNING

- Electronic components become permanently faulty when they are exposed to temperatures higher than 60°C. Normal AA batteries will crack open at temperatures >54°C and the battery contents will damage the electronic switches below. Batteries have the longest life span at <25°C.
- Only install the gas valve and receiver as pre-installed at the factory.
- Remember that components may have to be replaced or that repairs may have to be performed at a later date. This may prove to be more difficult if the control is installed in a different way to how we have described in instructions.

### Only insert the batteries after the receiver, gas valve and pilot flame have been wired.

Premature connection to the power source can damage the electronics. In the version with the LED module, inserting the batteries is not permitted. Use the mains adapter supplied with the LED module.

### 🔧 NOTE

Batteries must not be fitted in the receiver when using the power adapter.

### Ensure the ignition cable is not near the antenna wire and that they do not cross each other.

The high voltage released during ignition may damage the sensitive receiver circuit of the antenna. This could mean the appliance becomes less responsive or totally unresponsive to commands from the handset.

### Ensure the ignition cable is not near the antenna wire and that they do not cross each other.

The high voltage released during ignition may damage the sensitive receiver circuit of the antenna. This could mean the appliance becomes less responsive or totally unresponsive to commands from the handset.

### 🔧 NOTE

- Do not tighten the contact breaker and the thermocouple connection too tightly on the gas valve.
- It is sufficient to tighten by hand and add a half a turn with an open-end spanner. Tightening too much will break the connection to the magnetic coil below and/or the insulation around the aluminium contact pin in the contact breaker. This may cause the magnetic coil to not open the gas supply to the pilot flame and prevent the appliance from functioning.

Extend the supplied thermocouple with just the original extension. (Available from your supplier) Unauthorized extension of the thermocouple has the effect of stress reduction, thereby the magnetic coil can not be activated.

Prevent leakage of ignition spark to parts of the installation other than the ignition rod on the pilot flame. Ensure the ignition cable is not in contact with the body or other metal parts. If a cable extension is used, ensure the connections have additional silicone insulation.

The receiver and the control units on the gas valve should be switched on to ensure automatic start-up via the remote control. The oval disc on the gas valve should be turned to the **ON** position. The **I/O** switch should be set to **I**. The ignition cable should be connected to the **SPARK** connection point on the receiver.

The system's thermostat sensor is located inside the remote control. The remote control operates best at a distance of 2 or 3 metres away from the appliance. Although communication occurs via shortwave radio signals, it is recommended that you place the remote control in the line of sight of the gas appliance, in a place where the user wishes to experience a pleasant temperature. Do not place the manual transmitter in direct sunlight or other warm locations. The thermostat measures the temperature and, accordingly, regulates the flame size of the gas appliance.

### 🔧 NOTE

- Sealed parts must not be adjusted, to do so would void the warranty.
- A waiting time of 5 minutes between each start attempt must be observed.
- Remove batteries not with a metal tool. Removing batteries with a metal object can permanently damage the electronic control.

## 9 GAS-TECHNICAL SPECIFICATIONS

| Type of indication(s)  |                   | 1184 Room Divider – 1185 Tunnel                                     |                    |  |                   |
|--|-------------------|---|--------------------|--|-------------------|
| Appliance type   |                   | C11, C31, C91   |                    |  |                   |
| Concentric extraction system   |                   | Holetherm CC 100-150  |                    |  |                   |
| Gas type   |                   | G25,3   | G20/25             | G20  | G20↔25            |
| Supply pressure in mbar  |                   | 25  | 20                 | 20   | 20↔25             |
| Country  |                   | NL  | DE                 | AT/CH/CZ/DE/DK/EE/ES/ FI/GB/GR/HR/IE/IT/LT/LU/ LV/NO/PL/PT/RO/SE/SI/ SK/TR | BE/FR             |
| Category   |                   | I <sub>2</sub> EK<br>I <sub>2</sub> (43,46-45,3 MJ/m <sup>3</sup> ) | I <sub>2</sub> ELL | I <sub>2</sub> H/-/I <sub>2</sub> E  | I <sub>2</sub> E* |
| Primary air per burner   | mm                | 3x(2xØ4)  | 3x(2xØ5)           | 3x(2xØ5)   | 3x(2xØ5)          |
| Supply pressure  | mbar              | 25  | 20                 | 20   | 20↔25             |
| Burner pressure - high position  | mbar              | 22,4  | 17,8               | 17,7   | 17,7/22,29        |
| Burner pressure - low position   | mbar              | 10,9  | 9,7                | 9,7  | 9,7/10,9          |
| Injector orifice   | Ømm               | L1,55 M1,7 R1,55  | L1,55 M1,7 R1,55   | L1,55 M1,7 R1,55   | L1,55 M1,7 R1,55  |
| Pilot flame injector   | CODE              | 51  | 51                 | 51   | 51                |
| Low position orifice   | mm                | Adjustable  | Adjustable         | Adjustable   | Adjustable        |
| Load Hs  | kW                | 13  | 11,3               | 13,6   | 13,6              |
| Load Hi  | kW                | 11,8  | 10,2               | 12,2   | 12,2              |
| Gas consumption  | m <sup>3</sup> /h | 1,418   | 1,258              | 1,295  | 1,295             |
| Nominal power - high position  | kW                | 9,7   | 8,4                | 10,2   | 10,2              |
| Nominal power - low position   | kW                | 3,4   | 3,1                | 3,7  | 3,7               |
| NOx Hi EN613   | classe            | 4   | 4                  | 4  | 4                 |
| Efficiency Class EN613   |                   | 2   | 2                  | 2  | 2                 |
| <b>Useful return (NCV) system**</b>                                      |                   |   |                    |  |                   |
| For nominal heat output  | %                 | 83  | 83                 | 83   | 83                |
| For minimal heat output  | %                 | 76  | 76                 | 76,3   | 76,3              |
| <b>Supplementary electricity consumption</b>                             |                   |   |                    |  |                   |
| Nominal  | kWh               | 0,0072  | 0,0072             | 0,0072   | 0,0072            |
| Stand-by   | kWh               | 0,0003  | 0,0003             | 0,0003   | 0,0003            |
| <b>Energy efficiency***</b>  |                   |   |                    |  |                   |
| Energy efficiency index (EEI)  | %                 | 83  | 83                 | 83   | 83                |
| Energy label   |                   | B   | B                  | B  | B                 |
| NOx Hs   | mg/kWh            | 105   | 110                | 110  | 110               |
| <b>Heat output type/room temperature control</b>                         |                   |   |                    |  |                   |
| Indirect heat functionality  |                   |   |                    |  | No                |
| Single stage heat output, no room temperature control                    |                   |   |                    |  | No                |
| 2 or more manually-adjustable stages, no control of the room temperature |                   |   |                    |  | No                |
| With mechanical control of room temperature by thermostat                |                   |   |                    |  | No                |
| With electronic control of room temperature                              |                   |   |                    |  | Yes               |
| With electronic control of room temperature plus day-time switch         |                   |   |                    |  | Yes               |
| With electronic control of room temperature plus week-time switch        |                   |   |                    |  | Yes               |
| <b>Other control options</b>   |                   |   |                    |  |                   |
| Control of room temperature with presence detection*                     |                   |   |                    |  | Yes               |
| Control of room temperature with open window detection*                  |                   |   |                    |  | Yes               |
| With remote control option   |                   |   |                    |  | Yes               |

\* In combination with home automation

\*\* Shortest system path

\*\*\* EU directive 2015-1186/1188



| Type of indication(s)                        |        | 1184 Room Divider – 1185 Tunnel           |   |
|--|--------|---|---|
| Appliance type                               |        | C11, C31, C91                             |   |
| Concentric extraction system                 |        | Holetherm CC 130-200                      |   |
| Gas type                                     |        | G30/G31                                   | G30   |
| Supply pressure in mbar                      |        | (28-30)-37                                | 30/50   |
| Country                                      |        | BE/CH/CY/CZ/ES/FR/GB/GR/IE/IT/LT/PT/SI/TR | AT/CH/CY/CZ/DE/DK/EE/FI/GR/HR/HU/IT/LT/NL/NO/PL/PT/RO/SE/SI/TR/ |
| Category                                     |        | I3+                                       | I3B/P   |
| Primary air per burner                       | mm     | L=4xØ10, M=4xØ12, R=4xØ10                 | L=4xØ10, M=4xØ12, R=4xØ10                                       |
| Supply pressure                              | mbar   | (28-30)-37                                | 30/50<br>If burner pressure is 50 mbar, make corrections        |
| Burner pressure - high position              | mbar   | 28,1                                      | 28,1  |
| Burner pressure - low position               | mbar   | 11,19                                     | 11,19   |
| Injector orifice                             | Ømm    | L=1,1 M=1,2 R=1,1                         | L=1,1 M=1,2 R=1,1   |
| Pilot lame injector                          | CODE   | 30  | 30  |
| Low position orifice                         | mm     | Adjustable                                | Adjustable  |
| Load Hs                                      | kW     | 15,1                                      | 15,1  |
| Load Hi                                      | kW     | 13,9                                      | 13,9  |
| Gas consumption                              | m³/h   | 0,431                                     | 0,431   |
| Nominal power - high position                | kW     | 11,5                                      | 11,5  |
| Nominal power - low position                 | kW     | 3,5                                       | 3,5   |
| NOx Hi                                       | classe | 4   | 4   |
| Efficiency Class EN613                       |        | 2   | 2   |
| <b>Useful return (NCV) system**</b>          |        |   |   |
| For nominal heat output                      | %      | 83  | 83  |
| For minimal heat output                      | %      | 70  | 70  |
| <b>Supplementary electricity consumption</b> |        |   |   |
| Nominal                                      | kWh    | 0,0072                                    | 0,0072  |
| Stand-by                                     | kWh    | 0,0003                                    | 0,0003  |
| <b>Energy efficiency***</b>                  |        |   |   |
| Energy efficiency index (EEI)                | %      | 83  | 83  |
| Energy label                                 |        | B   | B   |
| NOx Hs                                       | mg/kWh | 115                                       | 115   |

#### Heat output type/room temperature control

|  |     |
|--|-----|
| Indirect heat functionality  | No  |
| Single stage heat output, no room temperature control                    | No  |
| 2 or more manually-adjustable stages, no control of the room temperature | No  |
| With mechanical control of room temperature by thermostat                | No  |
| With electronic control of room temperature                              | Yes |
| With electronic control of room temperature plus day-time switch         | Yes |
| With electronic control of room temperature plus week-time switch        | Yes |
| <b>Other control options</b>   |     |
| Control of room temperature with presence detection*                     | Yes |
| Control of room temperature with open window detection*                  | Yes |
| With remote control option   | Yes |

\* In combination with home automation

\*\* Shortest system path

\*\*\* EU directive 2015-1186/1188

Suitable for biopropane.



# 10 CONCENTRIC PATHWAYS

| Table of concentric pathways           |              |                   |      |                   |      |                                  |
|--|--------------|-------------------|------|-------------------|------|----------------------------------|
| Pathway                                | Illustration | X total in metres |      | Y total in metres |      | Restriction                      |
|  |              | Min*              | Max* | Min*              | Max* |                                  |
| <b>X = vertical and Y = horizontal</b> |              |                   |      |                   |      | <b>1184 en 1185</b>              |
| Indirect façade outlet G20/25/25,3     | A-B          | 1                 | 3    | 0                 | 5,5  | See restriction conditions       |
| Indirect façade outlet G30/G31         | A-B          | 1                 | 3    | 0                 | 3,5  | See restriction conditions       |
| Roof pass-through without slope        | C            | 2                 | 12   | -                 | -    | See restriction conditions       |
| Roof pass-through with 45° slope**     | D            | 3                 | 12   | 0                 | 4    | From X total - Y > 6 meter: 70mm |
| Roof pass-through with 90° slope***    | E            | 3                 | 12   | 0                 | 2    | From X + X1 - Y > 6 meter: 70mm  |


45° Bend: calculation length 1 metres, 90° Bend: calculation length 2 metres

\* Length including roof or exterior wall outlets. Always adhere to a starting length of 1 metre

\*\* Ratio vertical : horizontal X + X1 + X2: Y ≥ 2: 1

\*\*\* Ratio vertical : horizontal X + X1: Y ≥ 2: 1

| Restriction conditions all gas types                                    |              |                 |                   |
|---|--------------|-----------------|-------------------|
| Vertical lay out NG   |              |                 |                   |
| Distance  | Baffle plate | Flue restrictor | Supply restrictor |
| 2-6m  | Yes          | 70mm            | Yes               |
| 6-12m   | Yes          | 90mm            | Yes               |
| Vertical lay out LPG  |              |                 |                   |
| 2-6m  | Yes          | 65mm            | Yes               |
| 6-12m   | Yes          | 90mm            | No                |
| Horizontal lay out  |              |                 |                   |
| G25/25,3 horizontal sections up to 5,5 meter including wall ducts       |              |                 |                   |
| 1m 90° en 0,5m  | Yes          | 70mm            | Yes               |
| 1m 90° en 5,5m  | No           | No              | No                |
| G20 and G20/25 horizontal sections up to 5,5 meter including wall ducts |              |                 |                   |
| 1m 90° en 0,5m  | Yes          | 70mm            | Yes               |
| 1m 90° en 5,5m  | No           | No              | No                |
| G30/31 horizontal sections up to 3,5 meter including wall ducts         |              |                 |                   |
| 1m 90° en 0,5m  | Yes          | 65mm            | Yes               |
| 1m 90° en 3,5m  | Yes          | No              | Yes               |

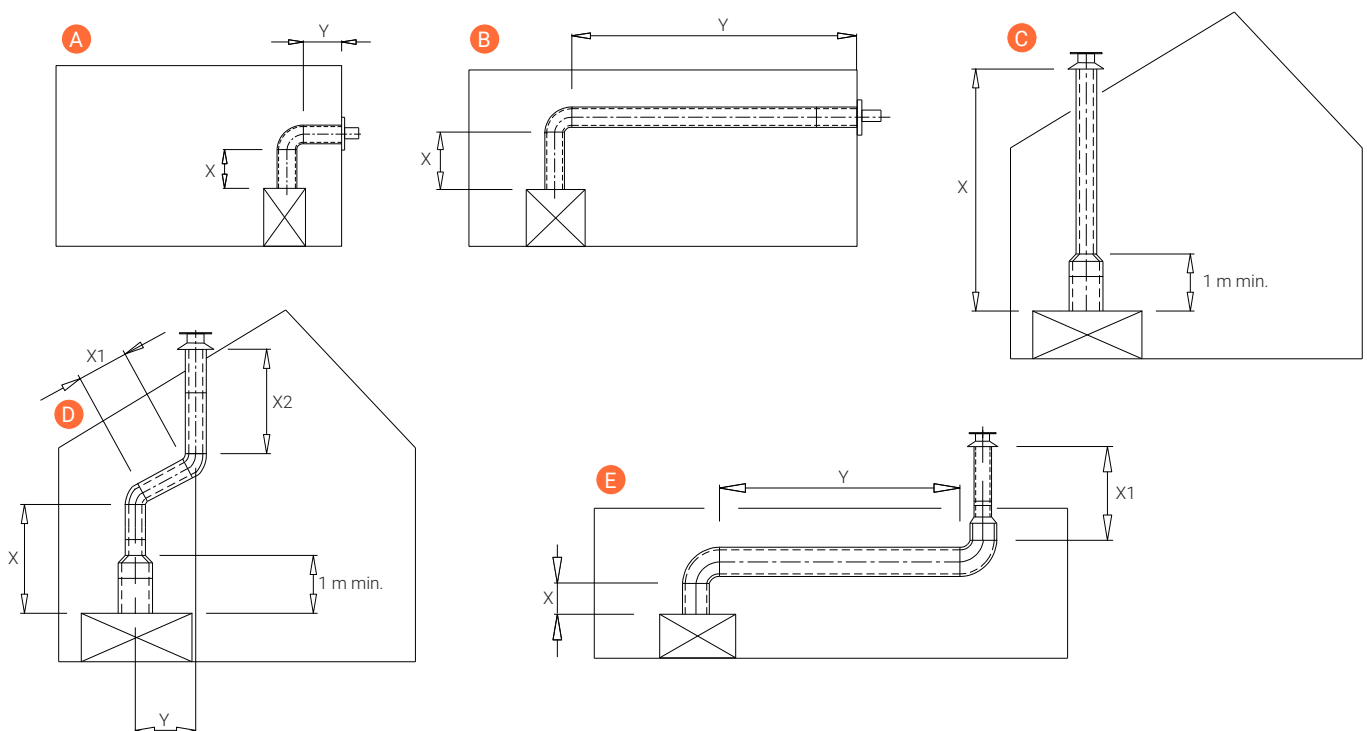

# 11 CONCENTRIC FLUE SYSTEM

The concentric flue system is composed of an inner flue and an outer flue. These flues have been set up concentrically so the combustion gases will be discharged via the internal flue while the fresh combustion air is supplied via the gap between the inner and outer flues.

## 11.1 Components of the concentric flue system

Different connections are possible using the concentric flue system. These are:

### Through the roof face and through the exterior wall

The pathway used for this system can be laid in different ways, but there are a few important conditions:

- The total allowed vertical flue length must not exceed 12 metres (the sum of the flue length and calculation lengths for the bends). See chapter 10 *Concentric pathways*.
- 90° bends have a 2-metre horizontal calculation length.
- 45° bends have a 1-metre horizontal calculation length.
- The outlet can be installed at any point on the roof face or exterior wall (supply and discharge in an identical pressure area), but must meet applicable regulations.
- Flue pathways must not be insulated.

#### NOTE

- Ensure the restrictor is mounted in the correct manner, as indicated in these instructions.
- The correct restrictor will provide the appliance with the most optimal efficiency, flame image and combustion.
- Mounting an incorrectly placed restrictor may cause malfunction of the appliance.

## 11.2 Construction of concentric flue system

### Indirect wall connection

- The outlet may also be installed in an upwards exhaust in the wall, taking any hindrance to the surrounding area into consideration, in accordance with local standards and regulations.

#### NOTE

Ensure wind pressure on the outlet is not excessive, such as in locations with a balcony, flat roof, corners and very narrow alleys, etc., as this can negatively affect the performance of the appliance.

- Make a recess in the façade of around 155mm or 205mm when using respectively Ø100-150 and Ø130-200 flues (keep an extra space of 50mm in a refractory façade around the outer tube) and fit the façade pass-through with the wall plate on the inside of the wall. The wall plate of the exterior façade pass-through must be sealed sufficiently against the wall on the outside to avoid moisture and/or flue gas leaks leaking into the living space.

- The flue should be encased if necessary. Even if the flue is to be installed along non-refractory materials, sufficient fire-resistant measures must be taken.
- Determine the position of the appliance and outlet and begin construction of the flue with the connection on the appliance, paying attention to the direction of installation and connecting the elements by means of clamp strips.
- An adjustable pipe can be used between the bends or when connecting to the appliance. If necessary, use wall brackets to support the flue.

### Mounting using the roof pass-through option

- The flue outlet can be located at any random place on the roof face (supply and exhaust in identical pressure areas) and must meet the applicable rules and regulations.
- A roofing sheet for a flat roof or a roofing for sloping tiled roofs can be used for a watertight duct. Use various bends for the slope, if required. The recess in the roof decking should be 50mm larger all around to ensure sufficient fire resistance.
- One needs to take into account the regulation regarding fire resistance between rooms. (For this, see the applicable local standards and regulations.) A casing of fireproof material (for example, 12mm Promatect fire-resistant plate) should be applied up to 25mm from the outer flue.
- Determine the position of the appliance and the outlet and begin the construction of the flue with the connection on the appliance (always 1 metre vertical first) pay attention to the direction of installation. The inner flue must be installed for draining purposes. Connect the elements using the clamping straps. Ensure all connections are gastight.
- An adjustable pipe can be used between the bends or when making the connection to the appliance and/or the roof pass-through. Use 2 wall brackets to support the flue on each floor.

## 11.3 Installation instructions regarding existing flues

### APPENDIX 2

### Instructions

The flue gas exhaust system falls within category: C91 and must be built in accordance with national rules and regulations and the instructions of the manufacturer, as specified in the documentation and installation instructions. This means, among other things, that the chimney pass-through must not be smaller than 150mm round/square, but no larger than 200mm, and not ventilated by grilles, etc. In the case of larger chimney pass-throughs, a flexible hose of around 150 mm may possibly be used in combination with a flexible hose of around 100mm, as described below. For other situations, consult your supplier.

## 11.4 Parts

Check all parts for damage before commencing the installation. For the conversion of a brick flue to concentric flue, connected to CC flue system, you need the components described in [APPENDIX 2](#).

### NOTE


The renovation/sanitation set consists of parts:

- ③ Interior mounting plate
- ④ Sliding element
- ⑦ Chimney mounting plate

## 11.5 Installation

- Guide the flexible hose ⑤ through the existing flue ⑥.
- Attach the slider ④ to the bottom of the flexible hose and secure this in place using two Parker screws.
- Keep the bottom of the slider at the same height as the bottom of the flue or ceiling.
- Shorten the flexible hose to approximately 100mm above the chimney coping.
- Attach the mounting plate to the flexible hose on the roof ⑦, clamp it with a hose bracket. Stainless steel Ø90 to 165, secure the whole with Parker screws.
- Attach the mounting plate to the chimney coping watertight on the roof ⑦ using silicone sealant and stainless steel screws.
- Install the roof pass-through ⑨ and secure it in place using the supplied clamping strip ⑧.
- The slider ④ will protrude approximately 100mm underneath the flue or ceiling after installation.
- Attach the inner mounting plate ③ gastight against the bottom of the structural flue or against the bottom of the concrete floor using silicone sealant and screws.
- Position the appliance in accordance with the instructions of the appliance manufacturer
- Install a minimum of 1 metre of concentric flue type THC CC ①.
- Extend the concentric flue using sections up to a minimum of 100mm in the structural duct. Finally, turn the clamping strip by hand in the mounting plate inside ③.

## 12 PASS-THROUGH POSITIONS AND FUNCTION CORRECTLY

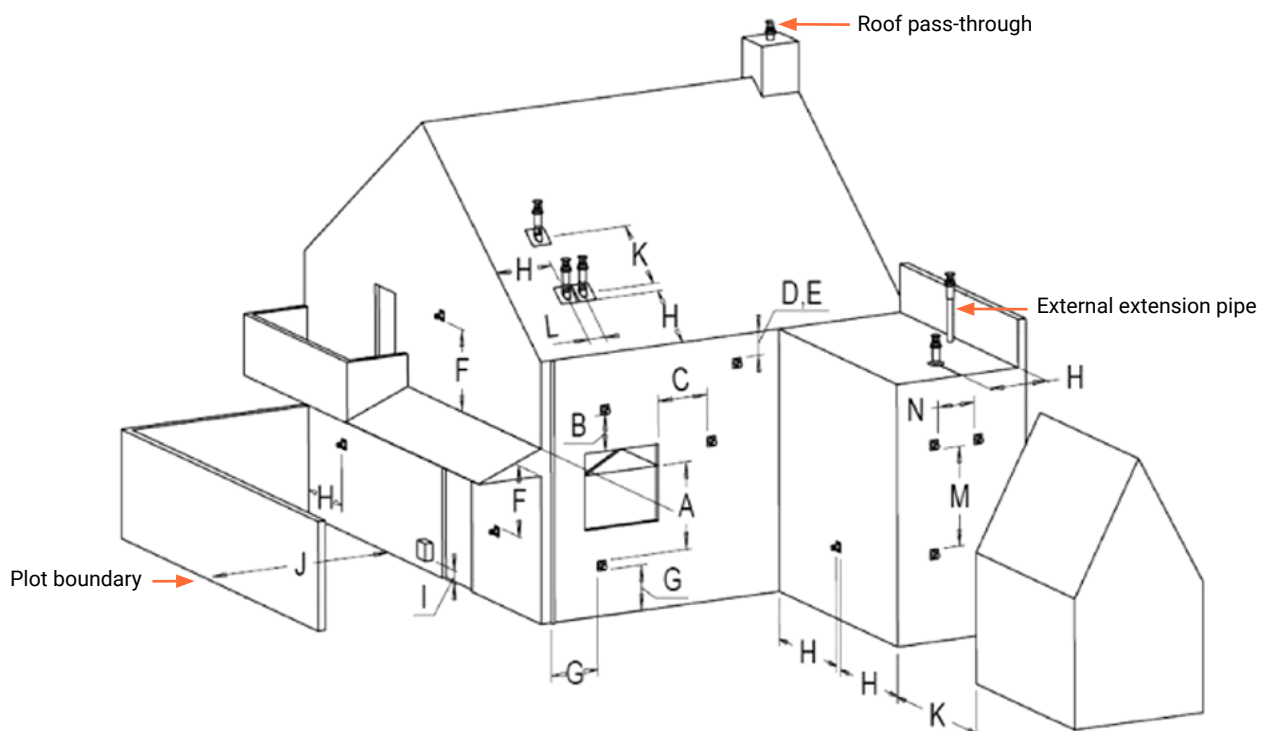

| Dimensions | Outlet positions   | Distance mm |
|------------|--|-------------|
| A          | Distance to ventilation openings                             | Room*       |
| B          | Distance to ventilation openings                             | Room*       |
| C          | Distance to ventilation openings                             | Room*       |
| D          | Lower gutter bottom pipes or exhaust lines                   | 500         |
| E          | Under the eaves  | 500         |
| F          | Under a carport, roof or balcony, inside and outside corners | 500         |
| G          | From ground level and rainwater drainage pipes               | 300         |
| H          | Inside and outside a corner                                  | 500         |
| I          | Above an external gas pressure regulator                     | 1000        |
|            | Side of a gas pressure regulator                             | 500         |
| J          | Conflict distance façade outlet                              | Room*       |
| K          | Roof drain centre to centre                                  | 1000        |
| L          | From the centre of both roof drains                          | 450         |
| M          | Two wall drains above each other                             | 1000        |
| N          | Two wall drains next to each other                           | 1000        |

\* In accordance with local building codes





# 13 CLEANING AND MAINTENANCE

- The appliance must be checked and serviced by a recognised installer at least once a year. The glass is also cleaned during this process.
- It is advisable to clean the outside of the appliance regularly, both in and out of the heating season.
- Do not use aggressive or corrosive cleaning agents or sharp objects.
- The concentric flue system must be cleaned every 2 years.  
A check must be carried out on:
  - 1 seal of the flue and supply circuits
  - 2 seal of the upper and lower pressure release hatches of the appliance; check the gasket
  - 3 operation of the pressure release hatches; that they can open and close freely
  - 4 the operation of the gas valve and ignition of the burner

## Measuring points

The appliance is equipped with measuring points to analyse the combustion gases and fresh combustion air. This allows the appliance to be checked.

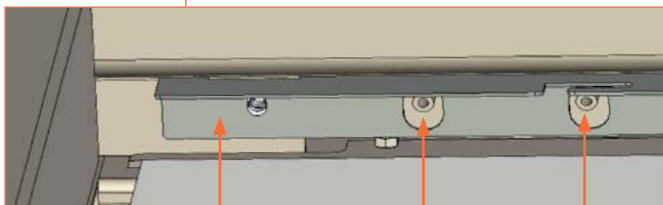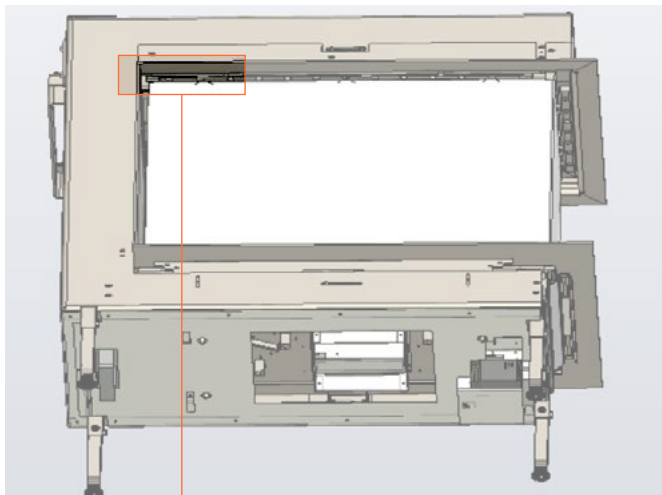

Glass holder

Fresh combustion air

Combustion gases

# 14 QUICK REFERENCE GUIDE FOR FAULTSSEARCH FOR ENCLOSED APPLIANCES USING MAXITROL GV60 GASCONTROL


| Function   | Possible cause   | Solution   |
|--|--|--|
| 1. Acoustic signals                                | 1 long beep → reset switch OFF (0)   | Set switch to (I)  |
|  | 1 long beep → connections not complete   | Check connections in thermocouple circuit  |
|  | 1 long beep → 8-core cable defective   | Check connections in connector/replace 8-core cable  |
|  | 1 long beep → micro switch defective   | Replace gas valve  |
|  | 1 long beep → Sync not OK  | Carry out new sync procedure for remote control/receiver   |
|  | 3 short beeps → mains adapter  | Replace batteries or 6-VDC adapter   |
| 2. No reaction remote control/receiver             | Power supply problem   | Check batteries/6-VDC adapter  |
|  | No sync remote/receiver  | Carry out sync procedure   |
|  | Distance between remote control/receiver   | Change position of receiver  |
|  | Defective receiver   | Replace receiver   |
|  | Faulty remote control  | Replace remote control   |
| 3. No pilot flame gas                              | Maxitrol GV60 DC magnet appliance does not open (no clicking noise from gas valve) | <ul style="list-style-type: none"> <li>• Check wiring and breaker on thermocouple circuit</li> <li>• Check/replace 8-core cable between remote control and gas valve</li> <li>• 1 x sparks and stop: check ground cable under torx gas valve</li> <li>• Replace receiver</li> <li>• Replace gas valve</li> </ul> |
| 4. Poor/no spark                                   | Spark cable loose  | Check spark cable connections  |
|  | Short circuit between cable and metal  | Check whether cable is free of metal parts   |
|  | Poor spark candle  | Check spark candle for fractures, replace if necessary   |
|  | Distance of sparking candle to pilot flame head                                    | Check distance is approximately 4mm  |
| 5. Pilot light difficult to ignite                 | Gas supply pressure too high, nervous flame  | Adjust gas supply pressure or adjust the pilot flame pressure using the gas valve  |
|  | Gas supply pressure too low, short flame   | Adjust gas supply pressure, check gas pipes, or adjust pilot flame pressure using the gas valve  |
|  | Air in (pilot flame) pipe, flame on/off  | Blow pipes through, make air-free  |
|  | Injector blocked   | Clean or replace pilot flame injector  |
|  | Blocked/curved pilot flame pipe  | Check and clean pipe   |
|  | Pilot light head damaged   | Check and replace pilot flame  |
| 6. Pilot light goes out after ignition             | Small pilot flame, no flame on thermocouple tip                                    | Check gas supply pressure, possibly too low  |
|  |  | Check pilot flame injector and gas pipe  |
|  | Nervous pilot flame flame, no flame on thermocouple tip                            | Check gas supply pressure, too high, adjust  |
|  |  | Adjust pilot flame pressure on gas valve   |
|  |  | Air in pipes, vent   |
|  | Lazy pilot flame, no flame on thermocouple tip                                     | Check premix opening on pilot flame, must be open  |
|  | Poor connections in thermocouple circuit   | Check cables/breaker in thermocouple circuit   |
|  |  | Check thermocouple connections in gas valve, do not over-tighten.  |
| Measure thermocouple circuit voltage 4.5mV minimum |  |  |
| Bad thermocouple                                   | Check open circuit voltage of thermocouple (18-30mV), replace if necessary         |  |
| Poor DC magnet appliance in Maxitrol GV60          | Replace gas valve  |  |

| Function   | Possible cause   | Solution  |
|--|--|---|
| 7. Pilot light goes out when the appliance is closed                 | False air along pilot flame holder/gasket                  | Check pilot flame holder and gasket for leaks   |
|  | False air hatches  | Check pressure hatches/gasket is completely closed  |
|  | Main flame causes pilot flame to go out                    | Check restrictor/baffle in accordance with regulations  |
| 8. Pilot light/main flame off  | Gas pre-pressure has dropped                               | Check correct dimensions of gas pipe or blockage, correct   |
|  | Main burner ignition, 3 beeps, low mains adapter voltage   | Check batteries or 6-VDC adapter  |
|  | Too much/little transport in appliance/outlet              | Check restrictor/baffle situation in accordance with instructions.  |
|  | Concentric outlet pathway incorrect                        | Check outlet pathway in accordance with instructions  |
|  | Recirculation, façade/roof mouth position incorrect        | Check outlet in accordance with instructions  |
|  | Recirculation in closed outlet system                      | Check outlet connections  |
| 9. Main burner does not start up                                     | Gas control valve knob to MAN                              | Check gas control valve knob to ON  |
| 10. Delayed ignition of main burner                                  | Pilot light burner blocked                                 | Check logs, pebbles, etc. are in the right position. pilot flame should be free of obstructions.                      |
|  | Small/lazy pilot flame                                     | Check and correct pressure and physical state of pilot flame burner   |
|  | Close main burner flame openings                           | Check and clean with a vacuum cleaner or similar device.  |
|  | Logs, etc. in wrong position                               | Check and correct, see instructions   |
| 11. Low main flame   | Gas supply pressure too low                                | Check gas supply pressure and corrections   |
|  | Burner pressure too low                                    | Check burner pressure, check instructions for correct values  |
| 12. No or little difference between high/low settings for main flame | Low position setting incorrect                             | Check and adjust low position in accordance with instructions   |
| 13. DB burner does not work  | Defective step valve                                       | Check whether clicking sound is perceptible, press button on remote control several times, replace valve if necessary |
| 14. Sooty flame  | Insufficient transport in appliance/closed drainage system | Check restrictor/baffle, follow instructions for correct value  |
|  |  | Check outlet system pathway in accordance with instructions   |
|  |  | Check outlet in accordance with regulations/instructions  |
|  | Excessive feed/burner pressure                             | Check and correct gas supply/burner pressure in accordance with instructions  |
|  | Blocked burner flame openings                              | Check and clean with a vacuum cleaner, for example  |
|  | Incorrect premix for main burners                          | Check and correct, see instructions   |
|  | Decorative logs, etc. in incorrect position                | Check and correct, see instructions   |


# Appendix 1 DIMENSIONAL DRAWINGS

Measurements in mm

## Trimline 83 Room Divider DB

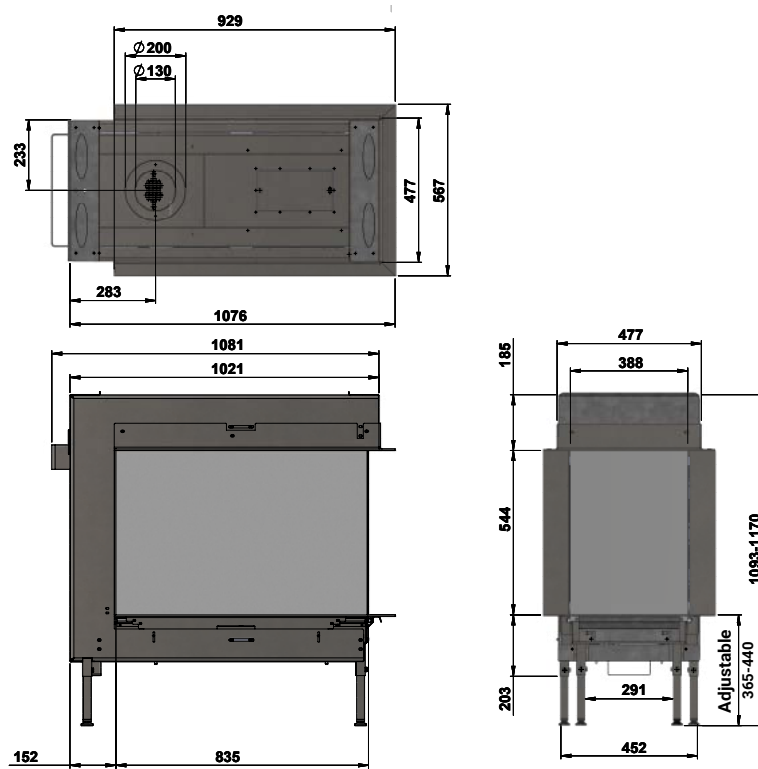


## Trimline 83 Tunnel DB

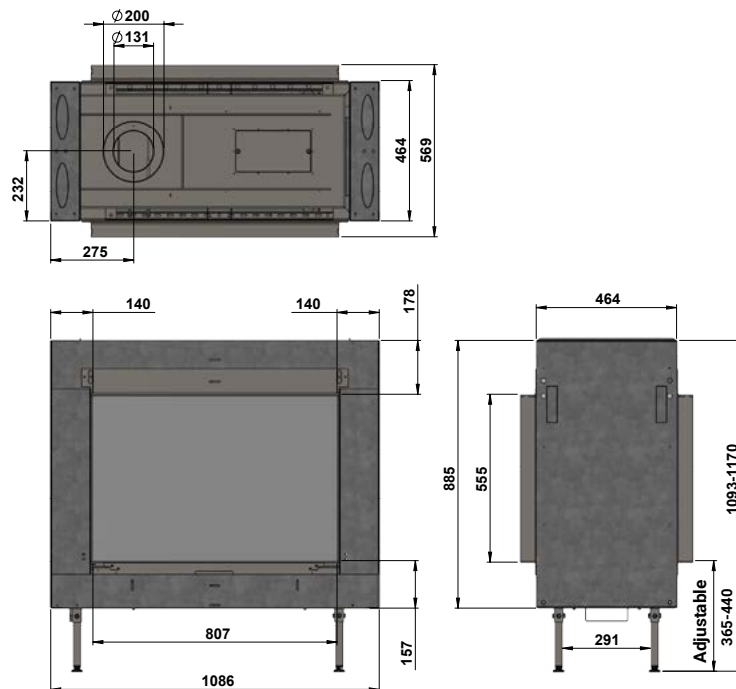


# Appendix 1 CONTINUED

Measurements in mm

## Built-in cassette

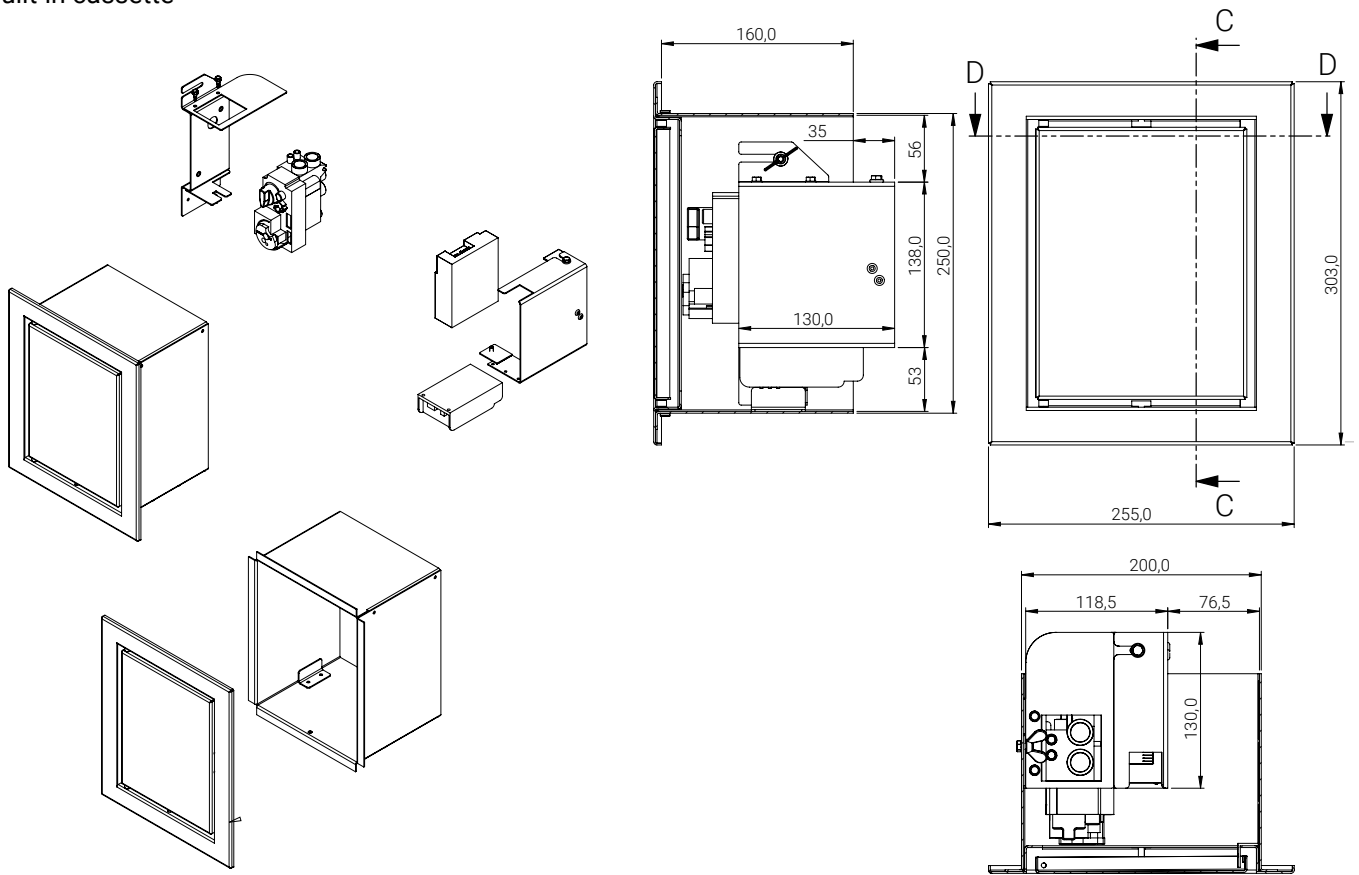


## Convection grilles

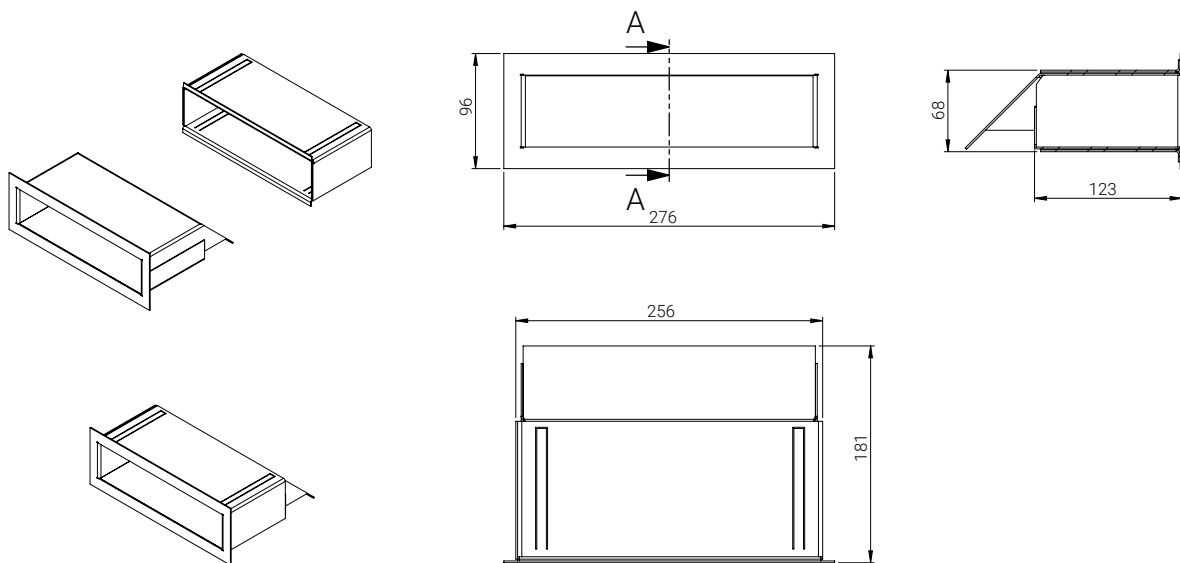


## Appendix 2 BUILT-IN EXAMPLES

### Trimline 83 Room Divider DB

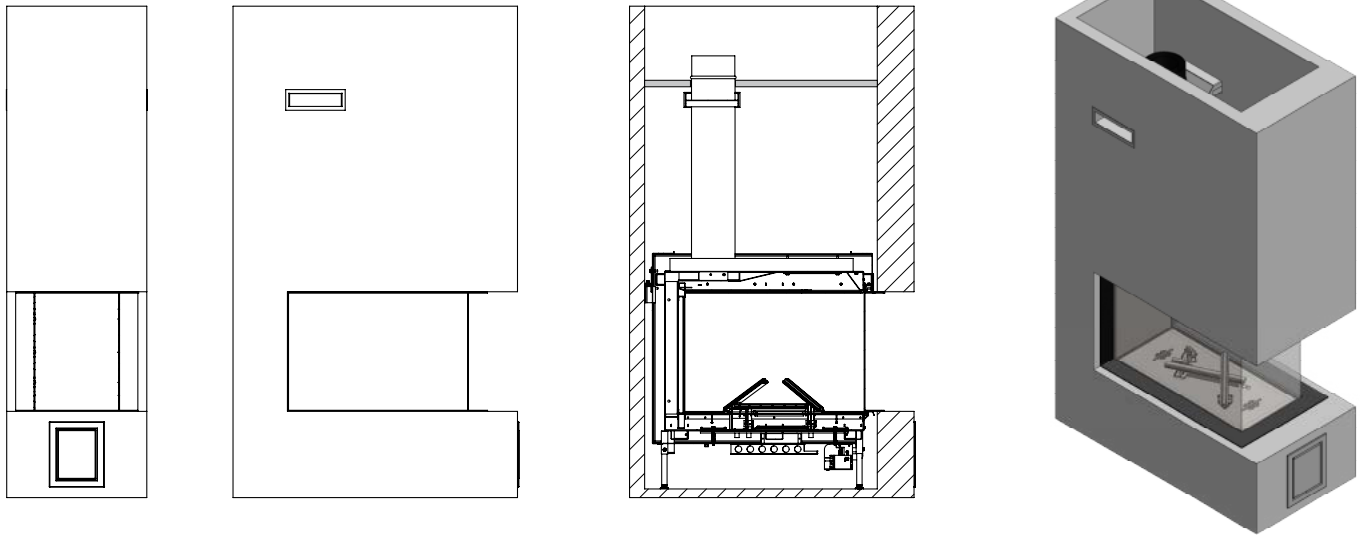


### Trimline 83 Tunnel DB

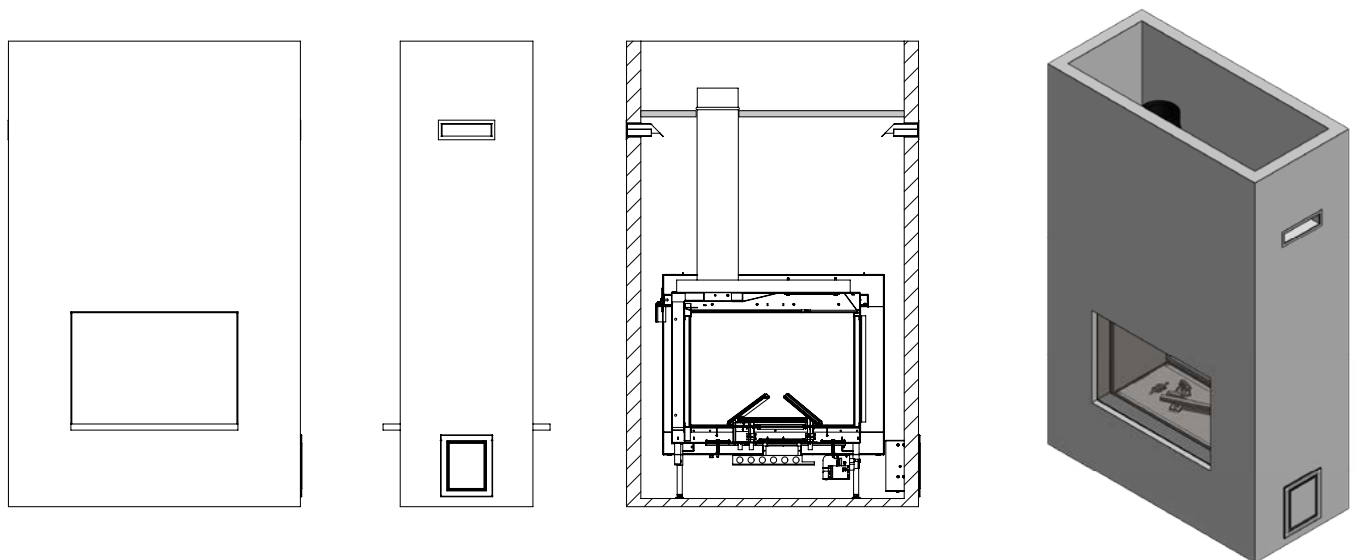


## Appendix 2 CONTINUED

Measurements in mm

### Trimline 83 Room Divider DB

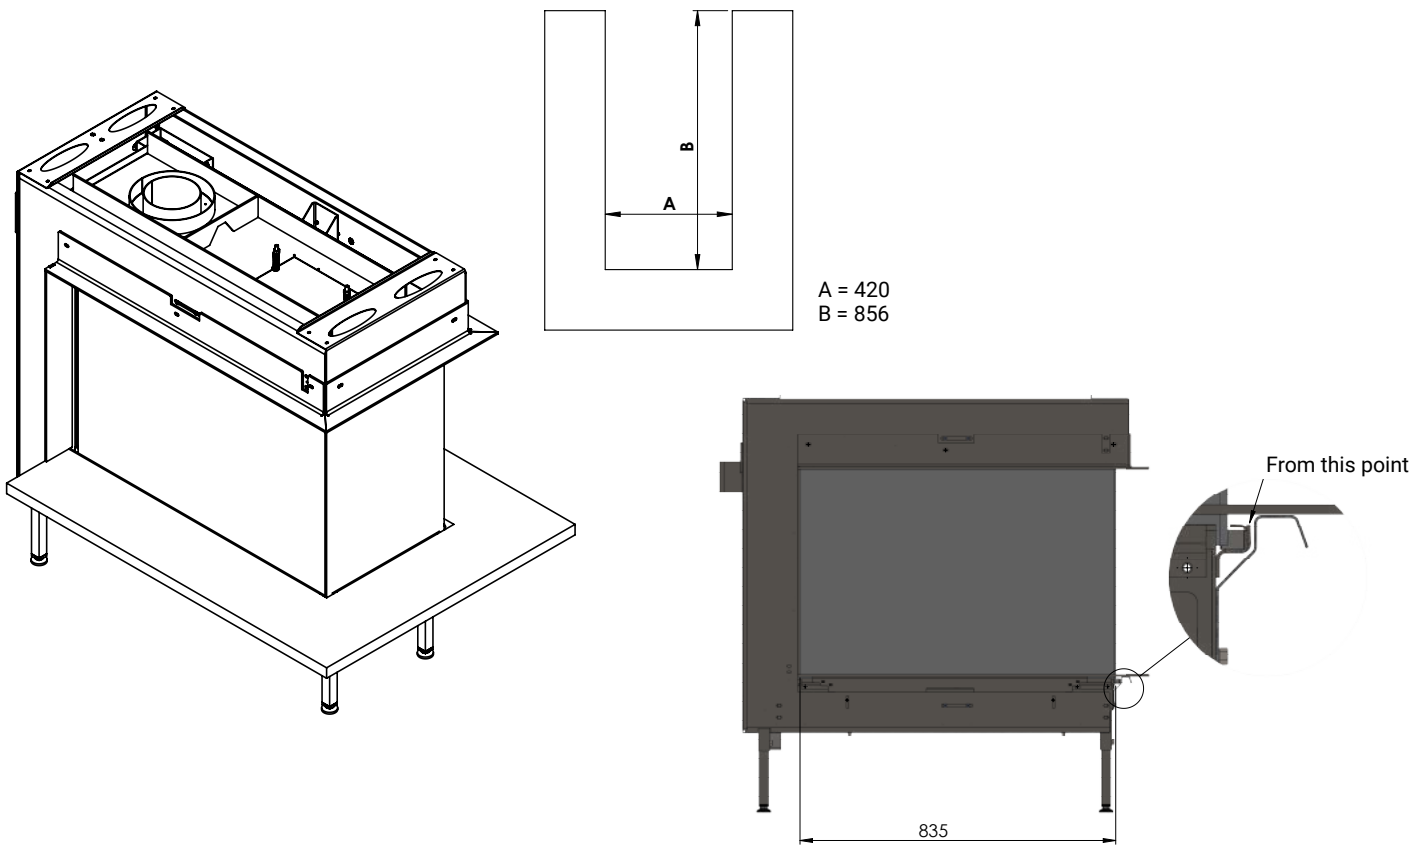

### Trimline 83 Tunnel DB

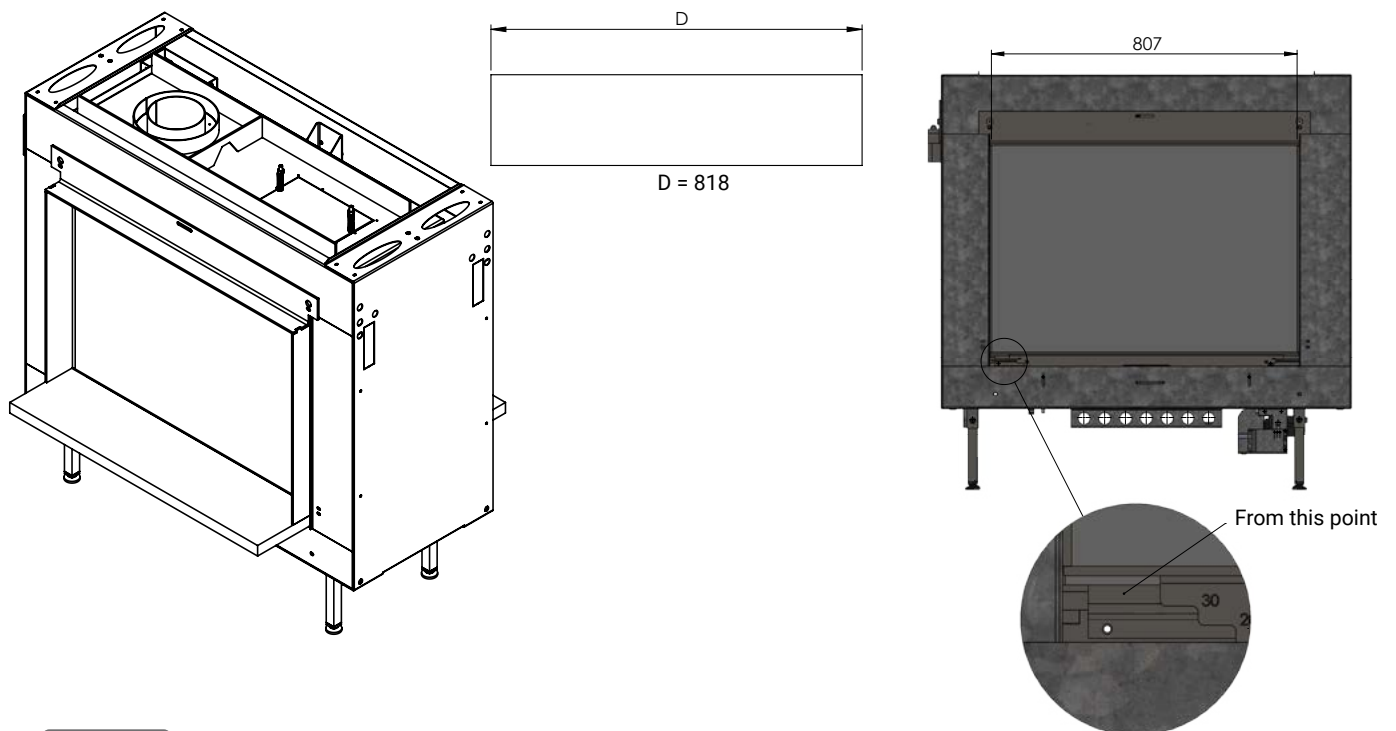

**NOTE**



Size always to be checked on appliance.



# Appendix 3 CONSTRUCTION DIAGRAM DOUBLE-WALL CONCENTRIC

Material: Stainless steel AISI 316 L - Allow number 1.4404


Application: for the discharge of flue gases and the supply of combustion air from gas-fired appliances or stoves with a closed combustion system

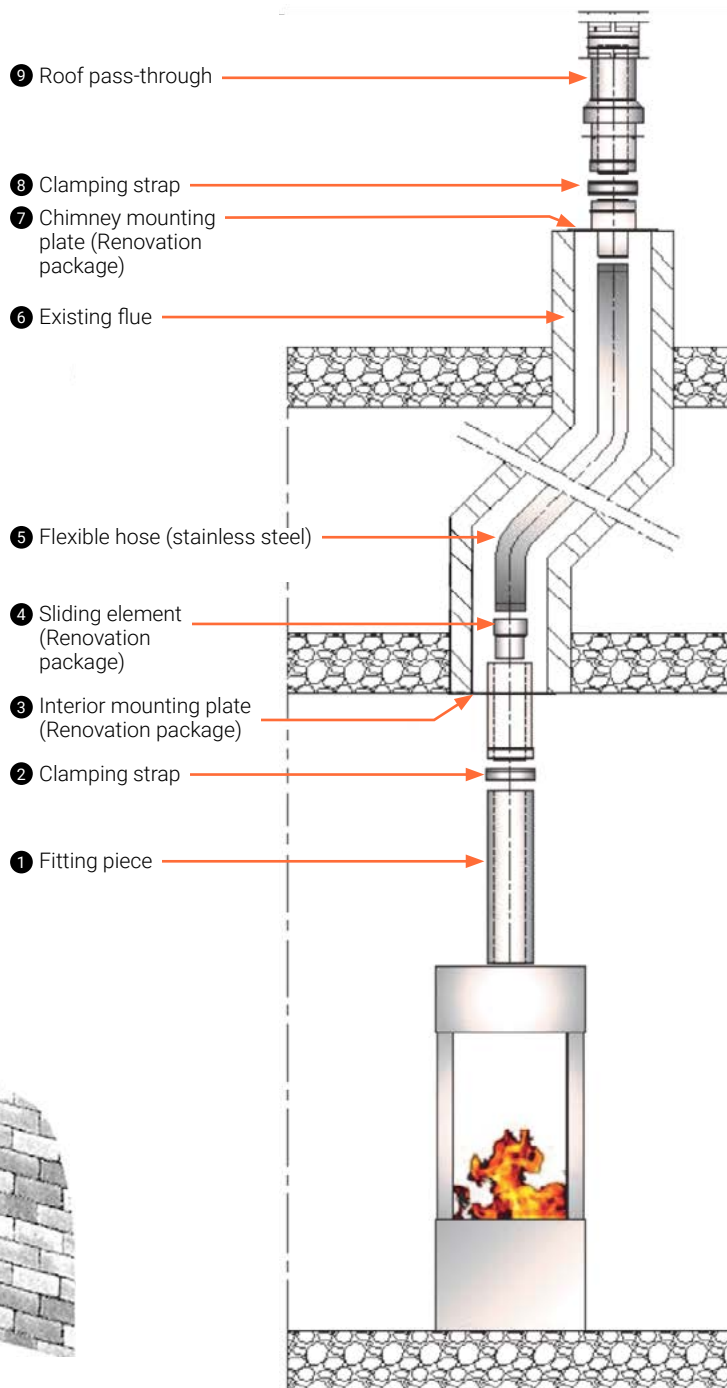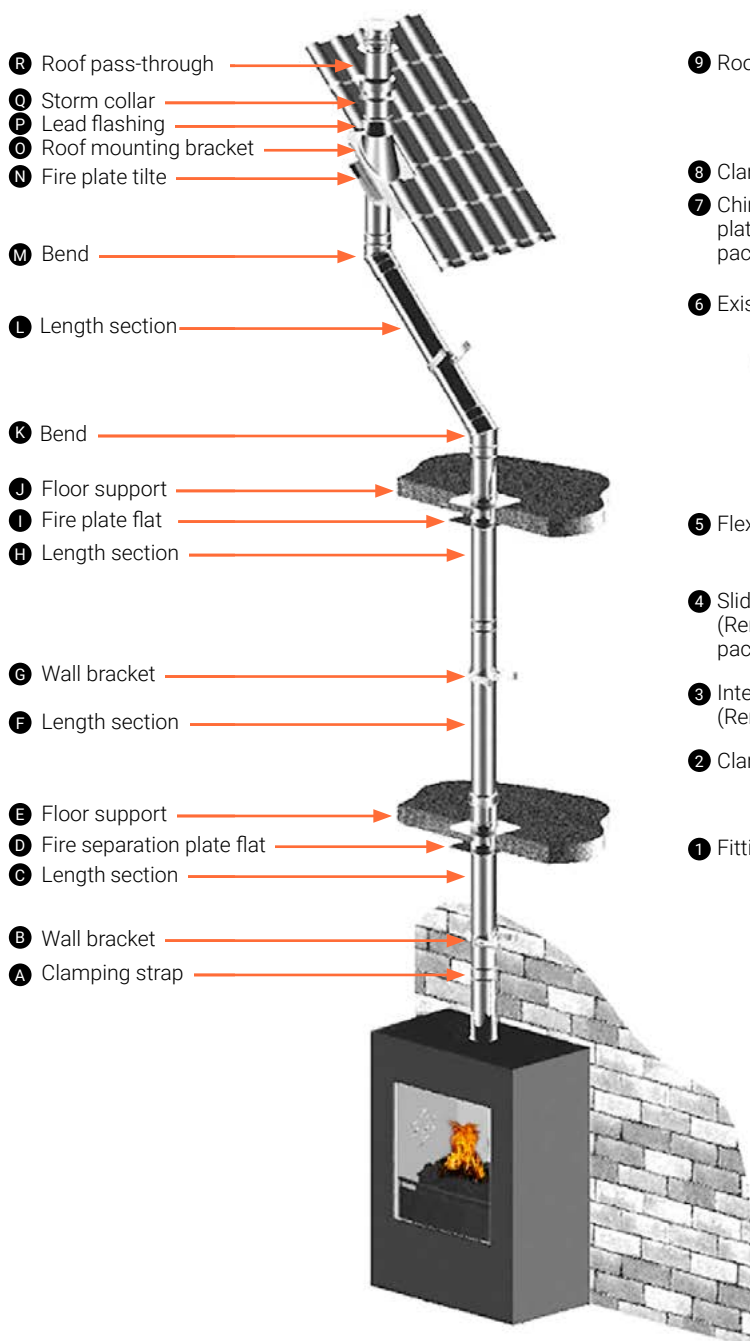




# Appendix 4 PREPARATION AND INSTALLATION

Remove the baffle plate

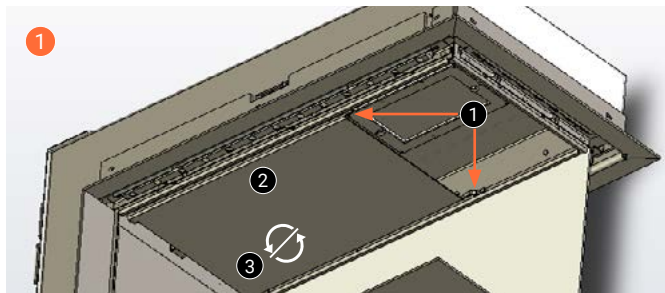


- 1 Loosen two parkers
- 2 Push the baffle plate from the rear wall towards the glass
- 3 Tilt to take out the baffle plate

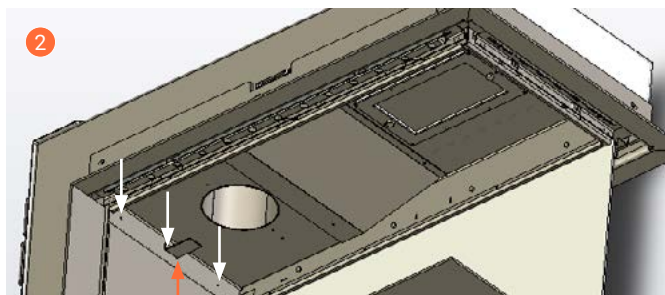


The baffle plate is located under the lip due to transport and danger of tipping over.

**NOTE**




In certain exhaust lay-outs, the baffle plate is not replaced, see chapter 10 Concentric pathways

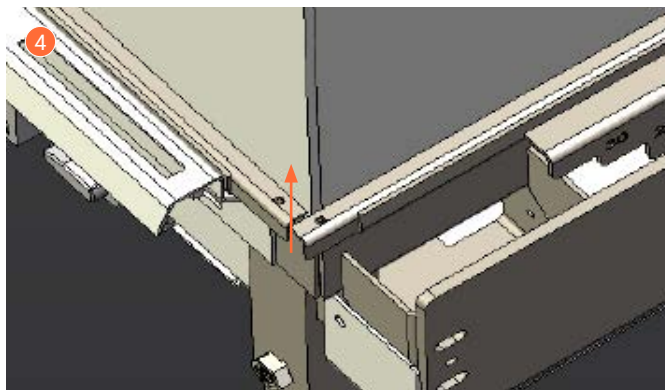

Intake restriction (See chapter 10 Concentric pathways for application)

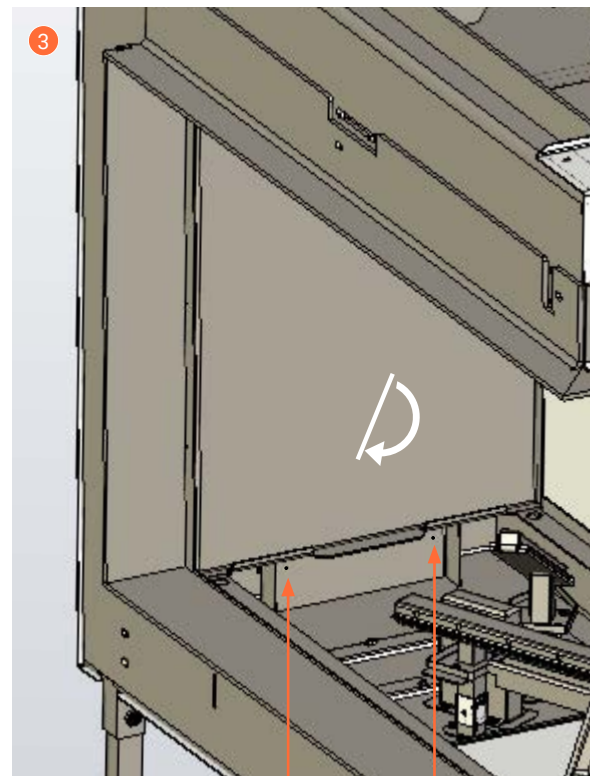

Disassemble supply restrictor using 2 parkers

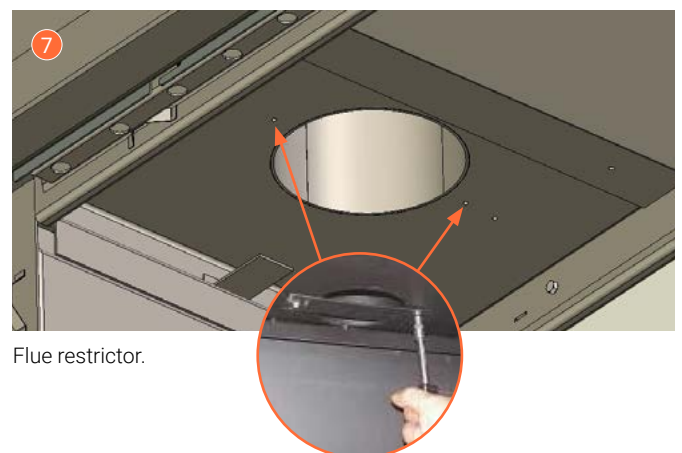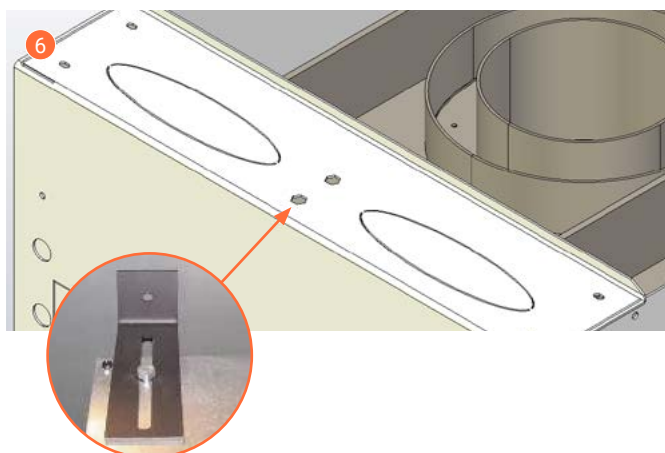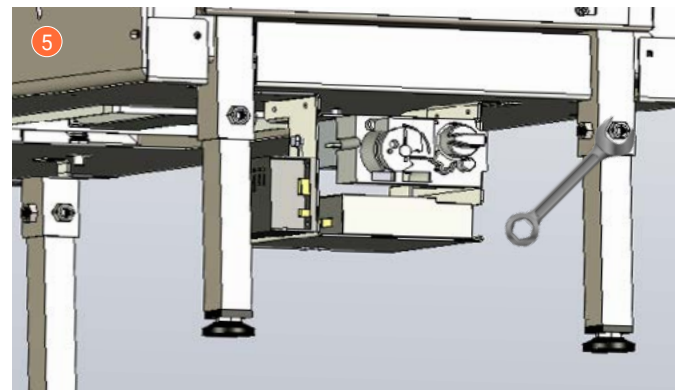

Flue restrictor.




## Appendix 5 PREPARING GAS CASSETTE GV60 FOR INSTALLATION

### STEP 1 ①

Cut the ties to release all lines. ①

### STEP 2 ①

Remove the protection bracket with gas control block and receiver. ②

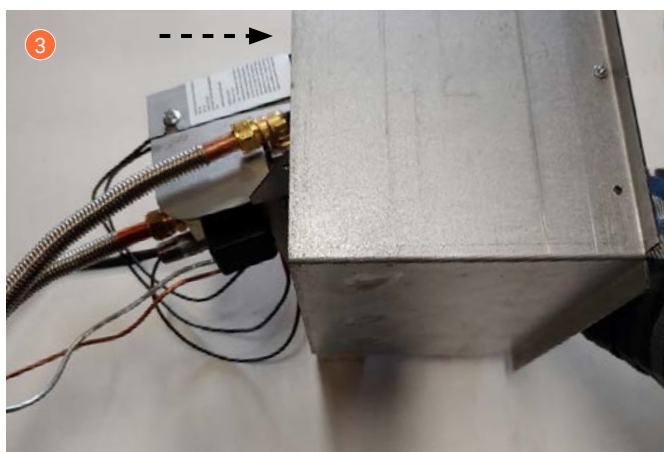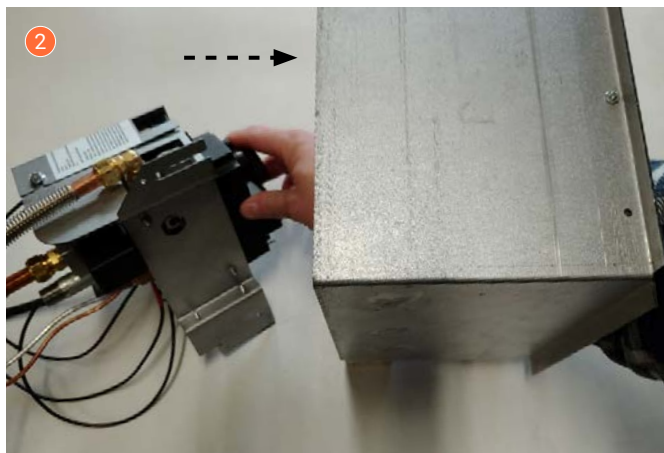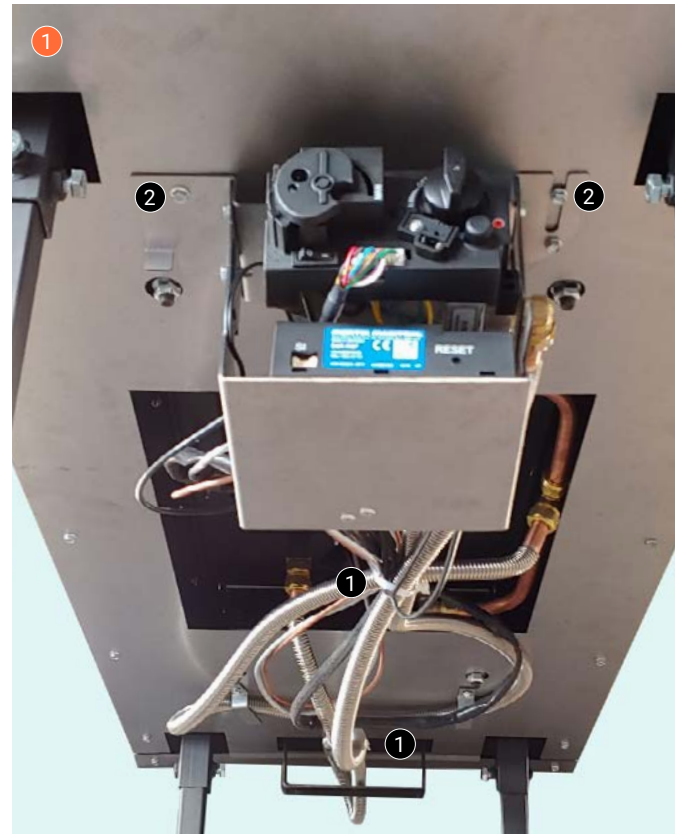

### STEP 3 ② ③ ④



Place the gas control block and receiver in the gas cassette.



## Appendix 5 CONTINUED

### STEP 4 5 6 7


Slide the bracket with the gas control block and receiver into place ①. Fix the wing nuts in place. ②

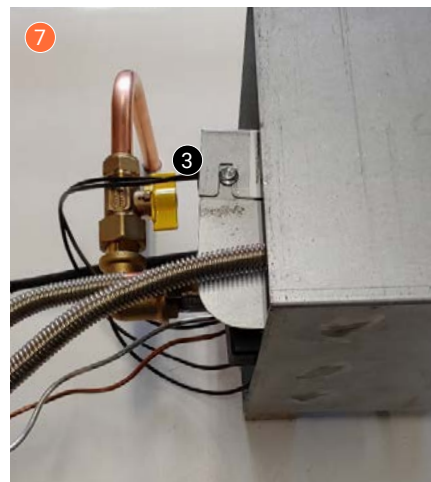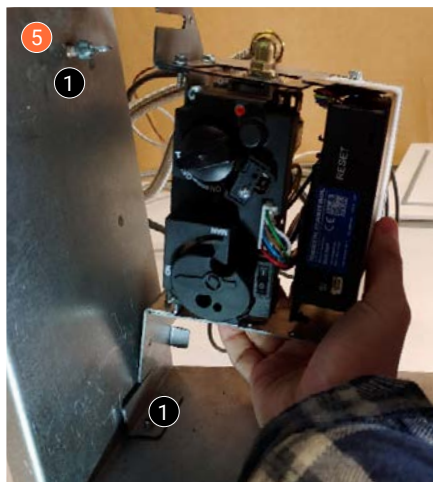

Example of installing an accessible tap. ③

# Appendix 6 EXPLODED VIEW AND SPARE PARTS

## Trimline 83 Room Divider DB

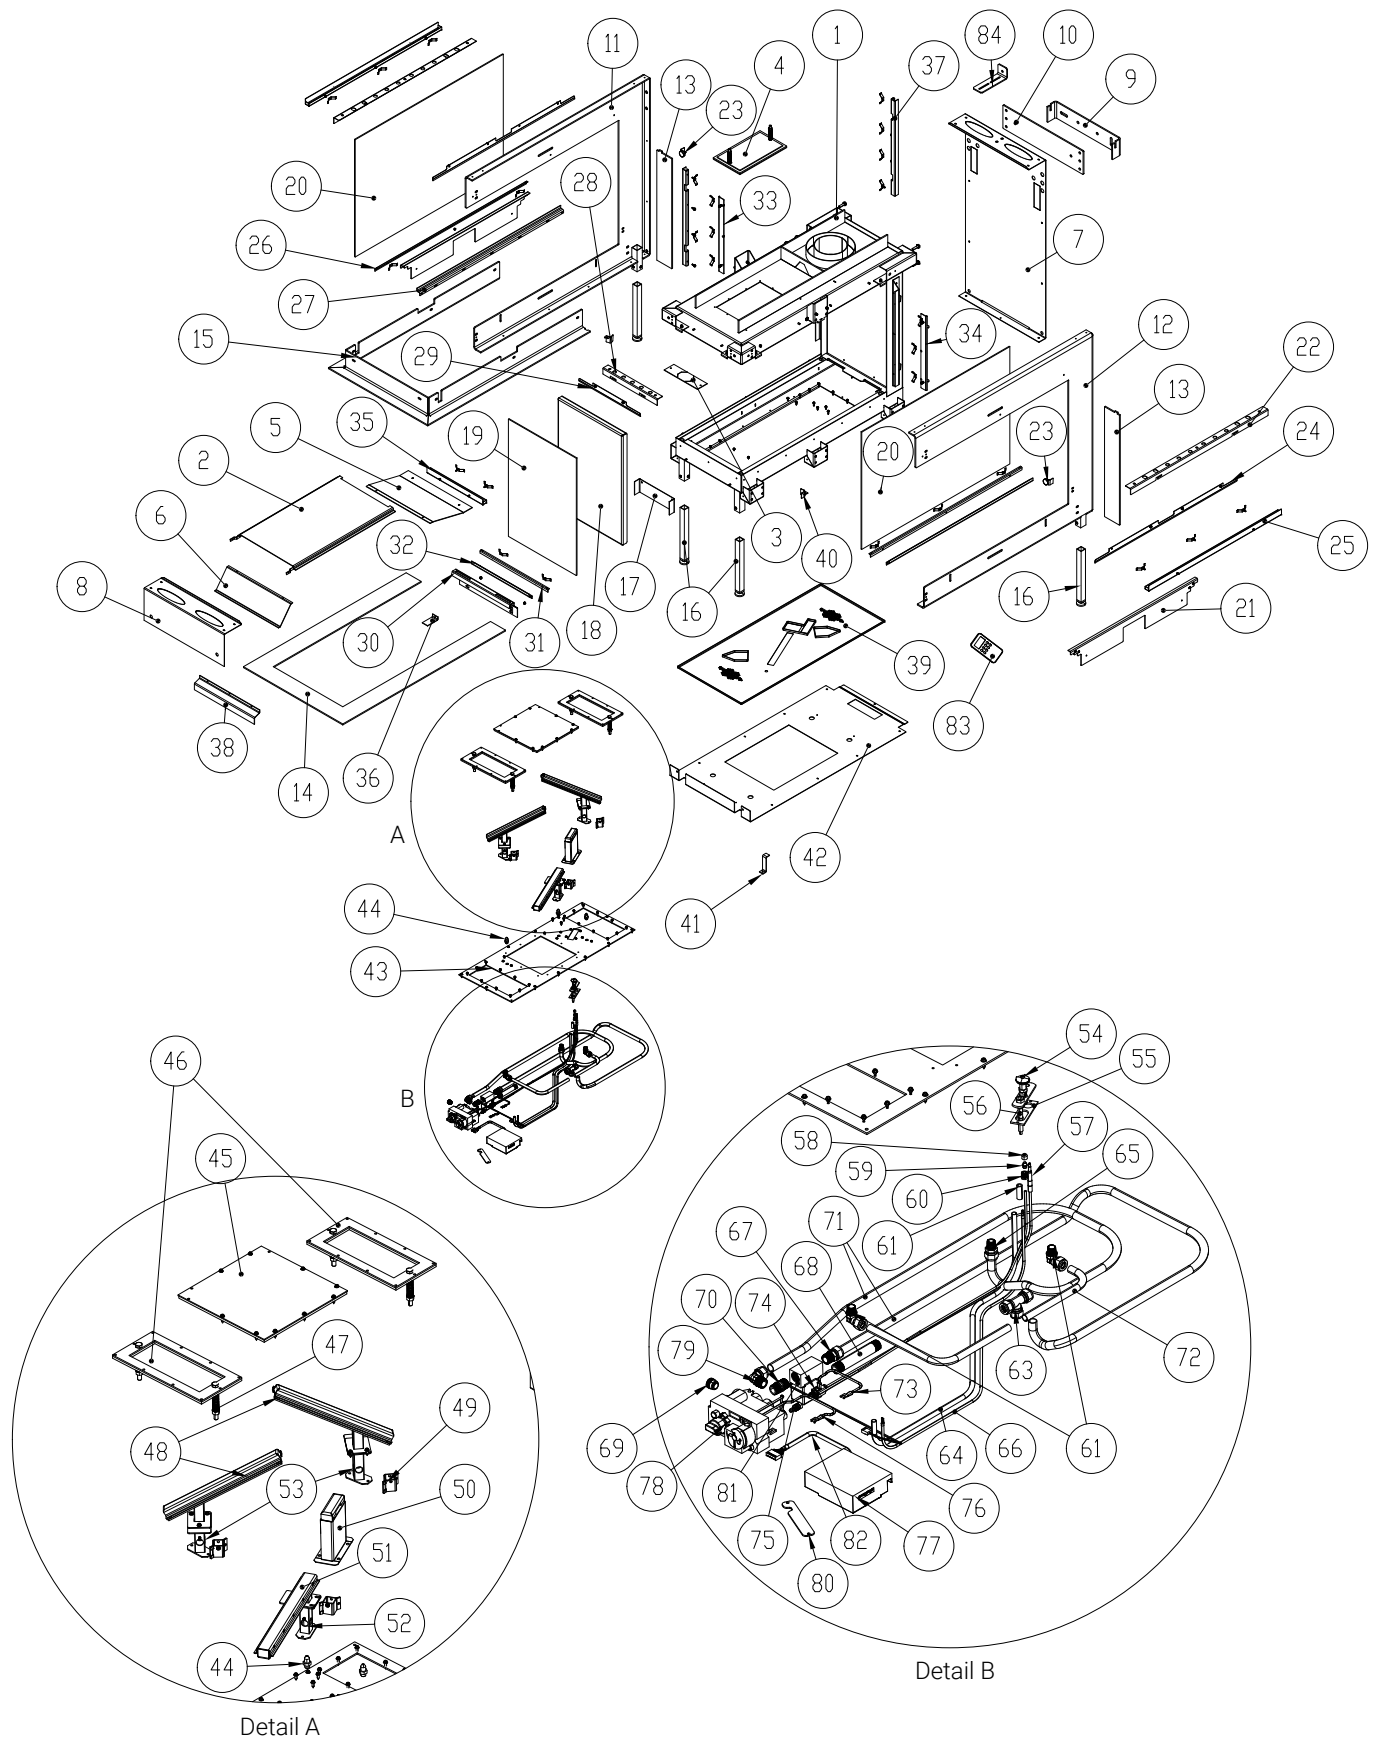

# Appendix 6 CONTINUED

## Trimline 83 Room Divider DB


| Pos no | Description                   | Art. Number  | Qty. |
|--------|-------------------------------|--------------|------|
| 1      | Combustion chamber            | 531184000000 | 1    |
| 2      | Baffle plate                  | 531184041000 | 1    |
| 3      | Restrictor 90 mm              | 531184051000 | 1    |
|        | Restrictor 70 mm              | 531184050000 | 1    |
| 4      | Pressure hatch plate          | 531184026000 | 1    |
| 5      | Back deflector                | 531184014000 | 1    |
| 6      | Front deflector               | 531184013000 | 1    |
| 7      | Back convection plate         | 531184009000 | 1    |
| 8      | Front convection plate        | 531184010000 | 1    |
| 9      | Wall hanging bracket          | 531184029000 | 1    |
| 10     | Wall hanging plate            | 531184015000 | 1    |
| 11     | Side support left             | 531184017100 | 1    |
| 12     | Side support right            | 531184034000 | 1    |
| 13     | Vertical side trim TL 8360 RD | 531184031000 | 2    |
| 14     | Bottom trim                   | 531184030000 | 1    |
| 15     | Top trim                      | 531184032000 | 1    |
| 16     | Adjustable foot               | 531080021000 | 4    |
| 17     | Air diverter                  | 531184016000 | 1    |
| 18     | Back lamel                    | 531184038000 | 1    |
| 19     | Glass panel front             | X            | 1    |
| 20     | Glass panel side              | X            | 2    |
| 21     | Bottom trim support side      | 531184018000 | 2    |
| 22     | Glazing bar holder top        | 531184021000 | 2    |
| 23     | Magnet bracket                | 531181023000 | 2    |
| 24     | Seal bracket top side         | 531181035000 | 2    |
| 25     | Glazing bar top side          | 531184004000 | 2    |
| 26     | Clamping                      | 531181039000 | 2    |
| 27     | Glass panel bracket side      | 531181033000 | 2    |
| 28     | Glazing bar top front         | 531184020000 | 1    |
| 29     | Seal bracket top front        | 531181036000 | 1    |
| 30     | Trim support bottom front     | 531184022000 | 1    |
| 31     | Clamping front                | 531184040000 | 1    |
| 32     | Glass panel bracket front     | 531181034000 | 1    |
| 33     | Clamping vertical left        | 531184035000 | 1    |
| 34     | Clamping vertical right       | 531184036000 | 1    |
| 35     | Glazing bar top front         | 531184003000 | 1    |
| 36     | Baffle plate bracket          | 531184019000 | 1    |
| 37     | Glazing bar vertical          | 531184005000 | 2    |
| 38     | Glass panel bracket front     | 531184037000 | 1    |
| 39     | Burner mesh                   | 531184012000 | 1    |
| 40     | Glass blockage                | 531184023000 | 2    |
| 41     | Ground burner holder          | 531184033000 | 1    |
| 42     | Convection mantle bottom      | 531184011000 |      |
| 43     | Bottom plate                  | 531181006000 | 1    |

| Pos no   | Description                                  | Art. Number  | Qty. |
|--|--|--------------|------|
| 44   | Main injector                                | See gas sets | 3    |
| 45   | Cover plate LED Unit space                   | 531181016000 | 1    |
| 46   | Pressure hatch                               | 531181026000 | 2    |
| 47   | Pressure hatch plate                         | 531181025000 | 2    |
| 48   | Log burner standup                           | 531181007000 | 2    |
| 49   | Air bracket 2x5                              | 531181048000 | 3    |
| 50   | Pilot flame holder                           | 531181013000 | 1    |
| 51   | Ground burner                                | 531184008000 | 1    |
| 52   | Ground burner bracket                        | 531181015000 | 1    |
| 53   | Burner bracket                               | 531181014000 | 2    |
| 54   | Pilot burner                                 | 64200432     | 1    |
| 55   | Pilot burner gasket                          | 64200434     | 1    |
| 56   | Igniter dia 2,3 mm connection                | 64200884     | 1    |
| 57   | Thermocouple 1500 mm SIT M9 (30)             |              | 1    |
| 58   | Pilot injector no 30 SIT G30/31              | 641800272    | 1    |
| 59   | Olive 4 mm pilot injector                    | 462000060    | 1    |
| 60   | Nut 4 mm pilot injector                      |              | 1    |
| 61   | Igniter insulation sleeve                    | X            | 1    |
| 62   | Compression knee 1/4"x12 mm                  | 601200001    | 2    |
| 63   | T fitting 12x12x11                           | 601201090    | 1    |
| 64   | Siliconized glass sleeve 8 mm                | 729900324    | 1    |
| 65   | Compression coupling 1/4"x12 mm              | X            | 1    |
| 66   | Ignition cable 4 mm/1500 GV-60               | 621002040    | 1    |
| 67   | Compression fitting 12 x 3/8"                | 601200307    | 1    |
| 68   | Gasconnection 3/8" mains                     | X            | 1    |
| 69   | GV30/60 plug 3/8"                            | X            | 1    |
| 70   | GV60 solenoid adapter                        | 641200330    | 1    |
| 71   | Gastube flex burner 2x12 mm l= 1500 mm       | 601000820    | 2    |
| 72   | Copper pipe 12 mm                            | X            | 1    |
| 73   | GV60 cable 500 mm thermocouple G60-ZKIRF/500 | 621000151    | 1    |
| 74   | GV60 M9x1 thermocouple interupter G60-ZUS09  | 642200224    | 1    |
| 75   | GV60 olive/nut 4 mm G30-ZLZ04                | 642400278    | 1    |
| 76   | GV60 cable 500 mm switch G60-ZSKLF/500       | 621000150    | 1    |
| 77   | Receiver GV-60 Ecomax Wifi ready             | 641204003    | 1    |
| 78   | GV60 gasvalve GV60 M1-C5D3K1L                | 641200327    | 1    |
| 79   | Knee joint 12x3/8"                           | 601200135    | 1    |
| 80   | Gasvalve holder                              | 531181056000 | 1    |
| 81   | GV60 DB solenoid GV-S60C/5                   | 641200329    | 1    |
| 82   | GV60 multicable 8X G6R-C3                    | 629900027    | 1    |
| 83   | Remote control GV-60 Ecomax B6R-H8TL3PBD     | 641200984    | 1    |
| 84   | Wall bracket                                 | 531181024000 | 1    |
| Gaskets, conversion gastype  |  |              |      |
| <ul style="list-style-type: none"> <li>• Gasset 20</li> <li>• Gasset G25</li> <li>• Gasset G30/31</li> </ul>   |  |              |      |
| Gasset contains  |  |              |      |
| <ul style="list-style-type: none"> <li>• Main injector</li> <li>• Pilot injector</li> <li>• Low set adjustment screw</li> <li>• Premix bracket NG</li> <li>• Type plate</li> </ul> |  |              |      |



# Appendix 6 CONTINUED

## Trimline 83 Tunnel DB

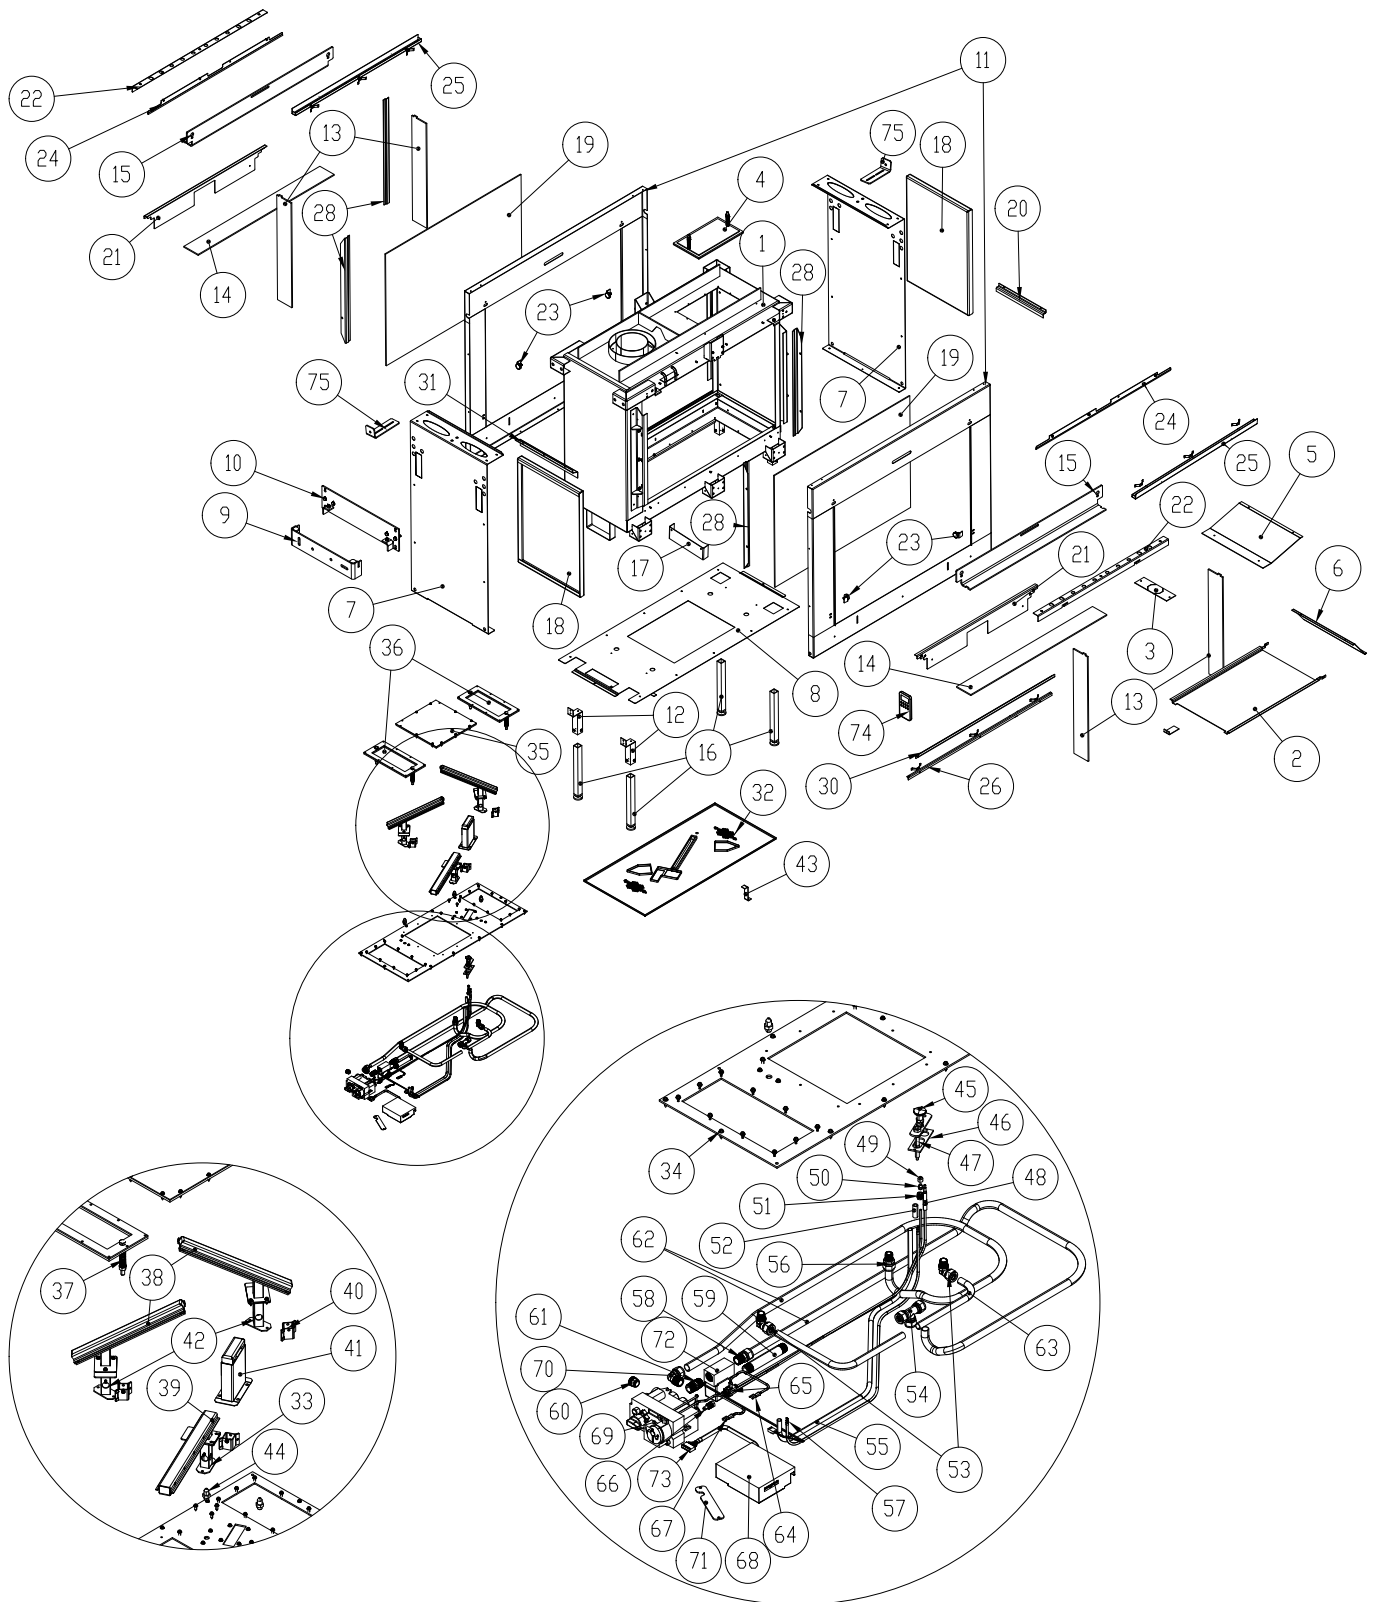

# Appendix 6 CONTINUED

## Trimline 83 Tunnel DB

|    |                            |              |   |
|----|----------------------------|--------------|---|
| 1  | Combustion chamber         | 531185000000 | 1 |
| 2  | Baffle plate               | 531184041000 | 1 |
| 3  | Restrictor 90 mm           | 531184051000 | 1 |
|    | Restrictor 70 mm           | 531184050000 | 1 |
| 4  | Pressure hatch plate       | 531184026000 | 1 |
| 5  | Back deflector             | 531184014000 | 1 |
| 6  | Front deflector            | 531184013000 | 1 |
| 7  | Convection plate side      | 531184009000 | 2 |
| 8  | Convection mantle bottom   | 531185011000 | 1 |
| 9  | Wall hanging bracket       | 531184029000 | 1 |
| 10 | Wall hanging plate         | 531184015000 | 1 |
| 11 | Side cover L/R             | 531184034000 | 2 |
| 12 | Leg support back           | 531185052000 | 2 |
| 13 | Vertical side trim         | 531184031000 | 4 |
| 14 | Bottom trim                | 531185030000 | 2 |
| 15 | Top trim                   | 531185032000 | 2 |
| 16 | Adjustable foot            | 531080021000 | 4 |
| 17 | Air diverter               | 531184016000 | 1 |
| 18 | Side lamel                 | 531184038000 | 2 |
| 19 | Glass panel                | X            | 2 |
| 20 | Wall bracket               | 531180441000 | 1 |
| 21 | Trim support bottom        | 531184018000 | 2 |
| 22 | Glazing bar holder top     | 531184021000 | 2 |
| 23 | Magnet bracket             | 531181023000 | 4 |
| 24 | Seal bracket top           | 531181035000 | 2 |
| 25 | Glazing bar top            | 531184004000 | 2 |
| 26 | Clamping                   | 531181039000 | 2 |
| 27 | Glass panel bracket        | 531181033000 | 2 |
| 28 | Glazing bar vertical       | 53118505000  | 4 |
| 29 | Baffle plate holder        | 531184019000 | 1 |
| 30 | Glass panel bracket        | 531181034000 | 1 |
| 31 | Side panel bracket         | 531184037000 | 2 |
| 32 | Burner mesh                | 531184012000 | 1 |
| 33 | Ground burner holder       | 531184033000 | 1 |
| 34 | Bottom plate               | 531181006000 | 1 |
| 35 | Cover plate LED unit space | 531181016000 | 1 |
| 36 | Pressure hatch             | 531181026000 | 2 |
| 37 | Pressure hatch plate       | 531181025000 | 2 |
| 38 | Log burner standup         | 531181007000 | 2 |
| 39 | Ground burner              | 531184008000 | 1 |
| 40 | Air bracket 2 x 5          | 531181048000 | 3 |
| 41 | Pilot flame holder         | 531181013000 | 1 |

|                             |  |              |   |
|-----------------------------|--|--------------|---|
| 42                          | Burner bracket                               | 531181014000 | 2 |
| 43                          | Ground burner bracket                        | 531181015000 | 1 |
| 44                          | Main injector                                | See gas sets | 3 |
| 45                          | Pilot burner                                 | 64200432     | 1 |
| 46                          | Pilot burner gasket                          | 64200434     | 1 |
| 47                          | Igniter dia 2,3 mm connection                | 64200884     | 1 |
| 48                          | Thermocouple 1500 mm SiT M9 (30)             |              | 1 |
| 49                          | Pilot injector no 30 SiT G30/31              | 641800272    | 1 |
| 50                          | Olive 4 mm pilotinjector                     | 462000060    | 1 |
| 51                          | Nut 4 mm pilot injector                      |              | 1 |
| 52                          | Igniter insulation sleeve                    | X            | 1 |
| 53                          | Compression knee 1/4" x 12 mm                | 601200001    | 2 |
| 54                          | T fitting 12x12x11                           | 601201090    | 1 |
| 55                          | Siliconized glass sleeve                     | 729900324    | 1 |
| 56                          | Compression coupling 1/4" x 12 mm            | X            | 1 |
| 57                          | Ignition cable 4 mm/1500 GV-60               | 621002040    | 1 |
| 58                          | Compression fitting 12 x 3/8"                | 601200307    | 1 |
| 59                          | Gasconnection 3/8" mains                     | X            | 1 |
| 60                          | GV30/60 plug 3/8"                            | X            | 1 |
| 61                          | GV60 solenoid adapter                        | 641200330    | 1 |
| 62                          | Gastube flex burner 2 x 12 mm l= 1500 mm     | 601000820    | 2 |
| 63                          | Copper pipe 12 mm                            | X            | 1 |
| 64                          | GV60 cable 500 mm thermocouple G60-ZKIRF/500 | 621000151    | 1 |
| 65                          | GV60 m9x1 thermocouple interupter G60-ZUS09  | 642200224    | 1 |
| 66                          | GV60 olive/nut 4 mm G30-ZLZ04                | 642400278    | 1 |
| 67                          | GV60 cable 500 mm switch G60-ZSKLF/500       | 621000150    | 1 |
| 68                          | Receiver GV-60 Ecomax Wifi ready             | 641204003    | 1 |
| 69                          | GV60 gasvalve GV60 M1-C5D3K1L                | 641200327    | 1 |
| 70                          | Knee joint 12 x 3/8"                         | 601200135    | 1 |
| 71                          | Gas valve holder                             | 531181056000 | 1 |
| 72                          | GV60 DB solenoid GV-S60C/5                   | 641200329    | 1 |
| 73                          | GV60 multicable 8X G6R-C3                    | 629900027    | 1 |
| 74                          | Remote control GV60 ecomax B6R-H8TL3PBD      | 641200984    | 1 |
| 75                          | Wall bracket                                 | 531181024000 | 1 |
| Gaskets, conversion gastype |  |              |   |
| • Gasset 20                 |  |              |   |
| • Gasset G25                |  |              |   |
| • Gasset G30/31             |  |              |   |
| Gasset contains             |  |              |   |
| • Main injector             |  |              |   |
| • Pilot injector            |  |              |   |
| • Low set adjustment screw  |  |              |   |
| • Premix bracket NG         |  |              |   |
| • Type plate                |  |              |   |

